


**MOCKETT** 

PART #

PCS26

310.318.2491 • 800.523.1269 • www.mockett.com

- 1. Determine location of the PCS26 on work surface. Make sure there is nothing under the work surface.
- 2. Make a 2-1/4" DIA. cut out in work surface.
- 3. Rotate locking cams to prevent interference before inserting base into hole/grommet.
- 4. Insert unit into the hole or grommet. Use a phillips screwdriver to tighten locking cams and secure unit base into work surface.
- 5. Insert the power and communication cords through the unit's base.
- 6. Any excess utility cords may be inserted into unit base.
- 7. Snap the unit housing onto the base.

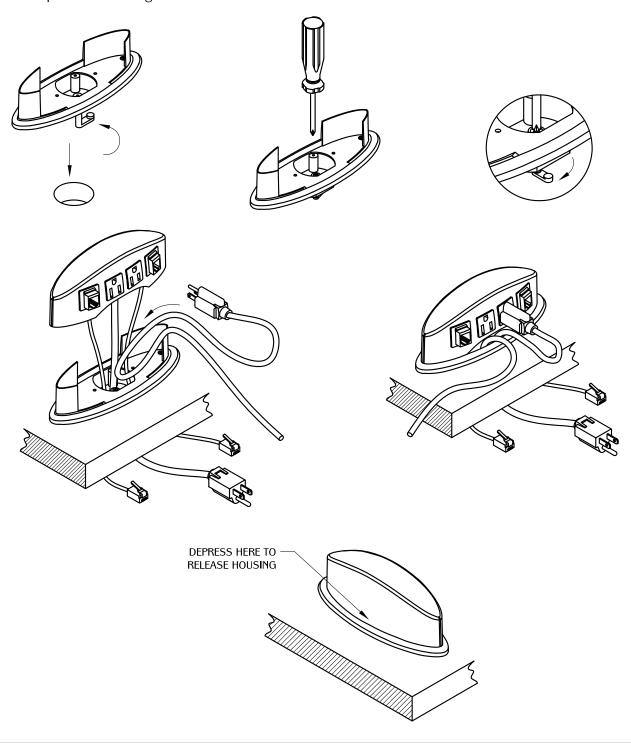

Part #

PCS DATA TREE


310.318.2491 • 800.523.1269 • www.mockett.com

## INSTALLATION INSTRUCTIONS FOR VOICE/DATA ADAPTER KIT & BASE PLATE

1. Select the appropriate voice/data adapter from the chart below (example: Avaya coupler/jack would use "AA" adapter).

\*Jacks & couplers sold separately, UL Listed (DUXR) or Recognized (DUXR2) jacks/couplers required.

Note: Adapters accommodate coupler/jacks by the following manufacturers:

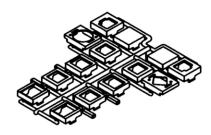

Adapter	Adapter Opening	Manufacturer	Website
AA	.654 X .700	Avaya/AT&T/Lucent Technologies	www.Avaya.com
ВВ	.594 X .792	Amp/Tyco	www.Amp.com
BB	.594 X .792	Panduit, Keystone Type	www.Panduit.com
BB	.594 X .792	Allen Tel	www.Allentel.com
BB	.594 X .792	Leviton	www.Leviton.com
CC	.594 X .752	Amp/Tyco	www.Amp.com
CC	.594 X .752	Krone	www.Krone.com
CC	.594 X .752	Hubbell	www.Hubbell.com
DD	No Opening	Blank (no coupler/jack)	
EE	.665 X .930	Ortronics TracJack	www.Ortronics.com
FF	.626 X .660	Panduit Mini-Com Connectors	www.Panduit.com
GG	.953 Diameter	Microphone jack/3-pin XLR	
НН		Video Monitor jack/DB-15	

2. Snap voice/data jack into adapter following the instructions provided with the jack.

3. Once assembled, snap adapter into the notched, square holes in the orientation shown.

4. If provided, snap adapter into any 1-3/8" X 2-3/4" opening.

Coupler/jack (Not included)

Adapter

(Optional)