
PART #


PCS46

310.318.2491 • 800.523.1269 • www.mockett.com

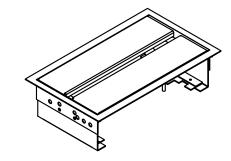


PCS46 requires an undercut to allow the doors to swing freely. Please review the following instructions before installation.

1

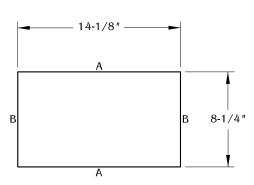


From the top of the table, cut a $14-1/8" \times 8-1/4"$ hole.

2

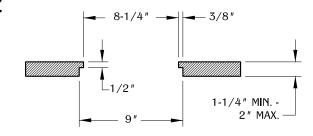


From the bottom of the table route out the A sides by an additional 3/8" wide, providing a $14-1/8" \times 9"$ hole. Leave 1/2" depth from the top on both sides.

3

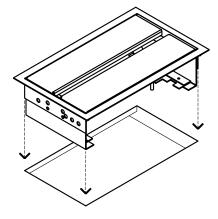

Insert PCS46 into the hole from above.

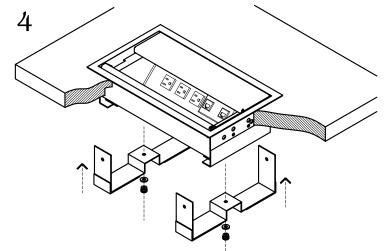

Use brackets to clamp in the unit.

5

Test doors for smooth operation an

Test doors for smooth operation and adjust cut out as required.

6 Connect power and data cabling and check for proper operation.