

TL77/FOLD

PROPRIETARY AND CONFIDENTIAL.
ALL DIMENSIONS HAVE A +/- 1/16" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.



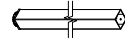




WARNING


- Make sure the part is locked into place before propping up the work surface.

SPECIFICATIONS

- Weight capacity is 200 lbs. per leg.
- Table thickness is 25.40mm (1") MIN.
- Table Width is 914.00mm (36") MIN.
- Table length is 1828.00mm (72") MAX.

TABLE OF CONTENTS

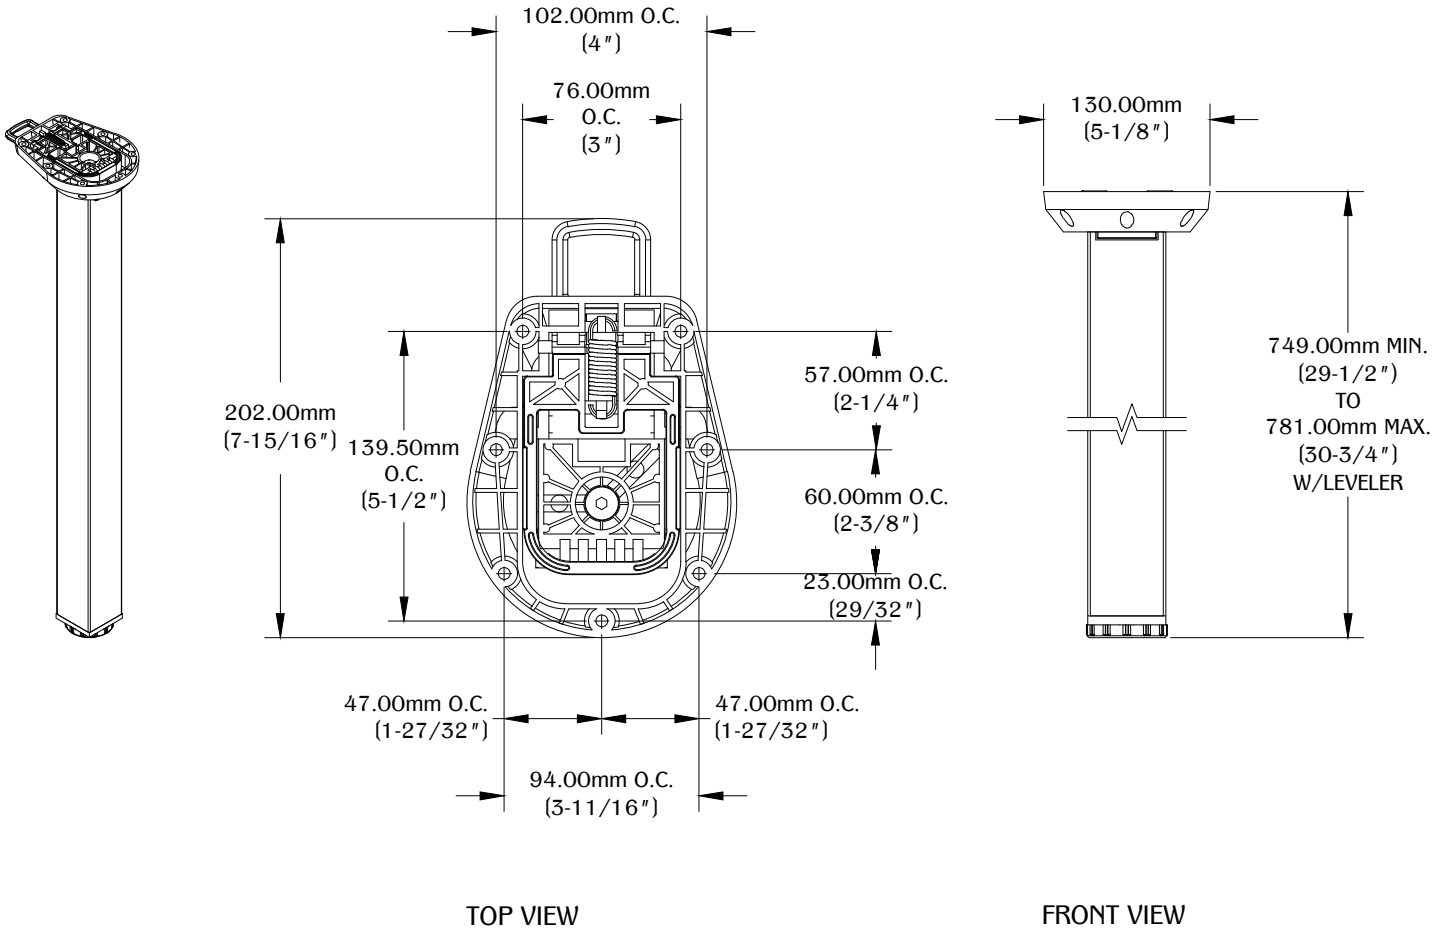
 1X TL77
 1X M8 X 1.25 X 40.00mm Socket Head Screw
 7X 31/32" No. 10 Pan Head Wood Screw
 1X TP-FOLD
 1X Hex Key




TL77/FOLD

PROPRIETARY AND CONFIDENTIAL.

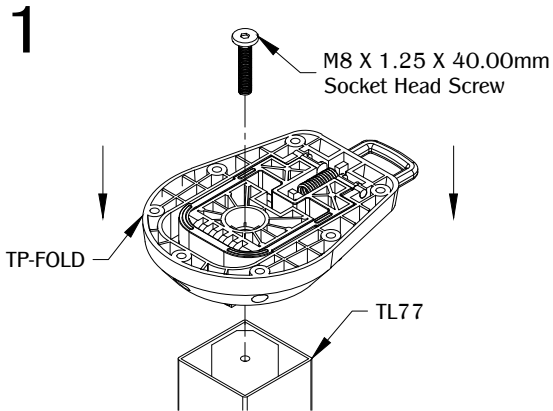
ALL DIMENSIONS HAVE A +/- 1/16" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.



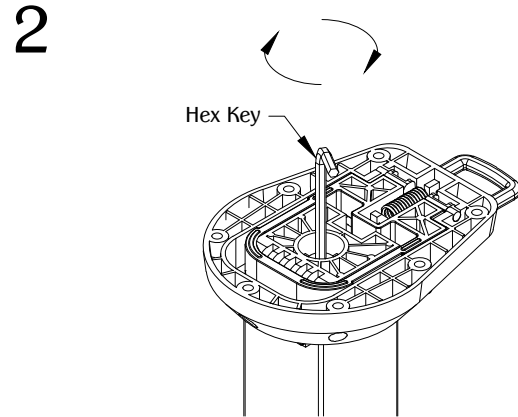
Align the M8 X 1.25 X 40.00mm socket head screw and the TP-FOLD to the top of the TL77.



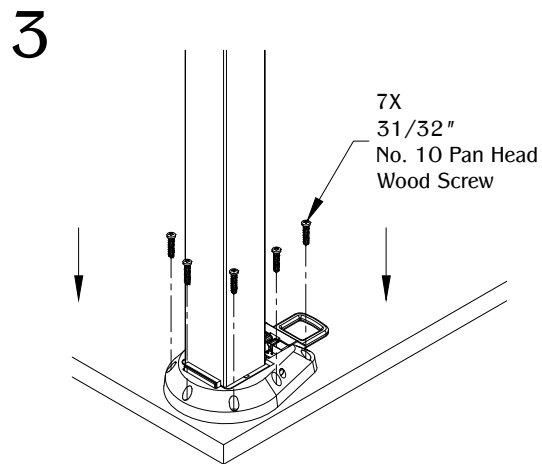
Secure the TP-FOLD to the TL77 by tightening with a hex key.



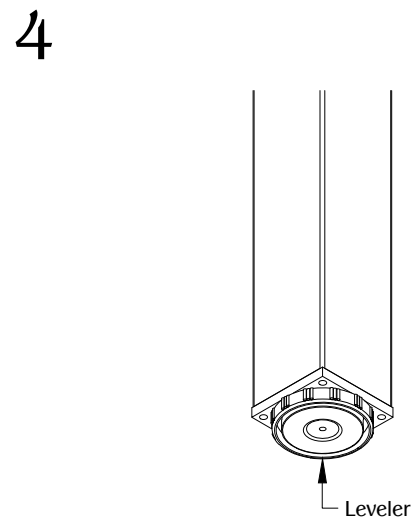Determine the position and location of the part under the work surface. Secure the leg by using (7) 31/32" No. 10 pan head wood screws.



Adjust the leveler to desired height.

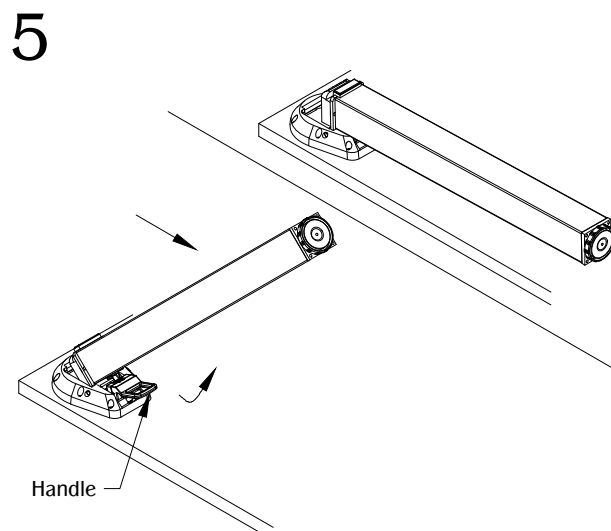

Pull out and lift the handle on the TP-FOLD while pushing the TL77 to collapse the leg.

