

## BRV1

 
PROPRIETARY AND CONFIDENTIAL.

ALL DIMENSIONS HAVE A  $\pm 1/32"$  TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.


### SPECIFICATIONS

- Maximum cord diameter is  $9/16"$ .


### TABLE OF CONTENTS




..... 1X BRV1  
Lid

 

..... 1X BRV1  
Liner

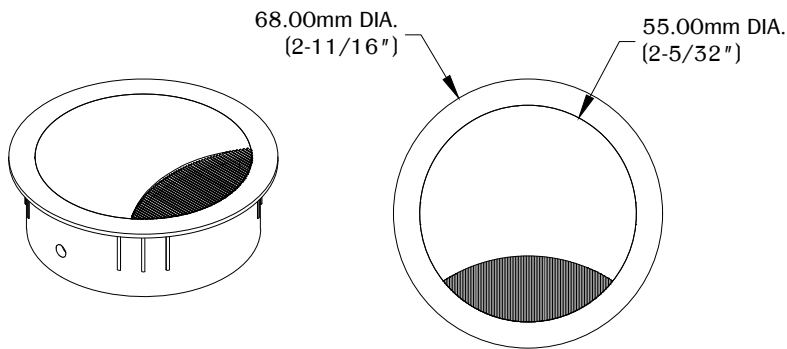


TOP VIEW

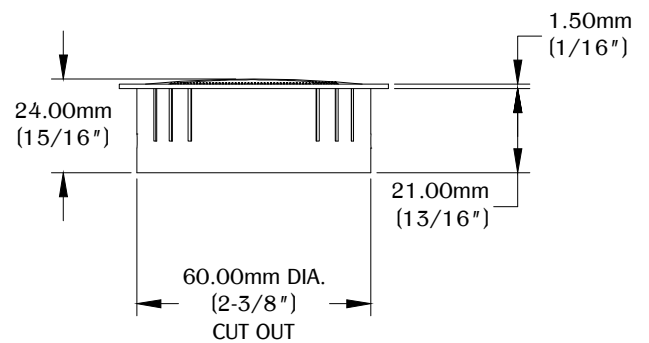


FRONT VIEW

1

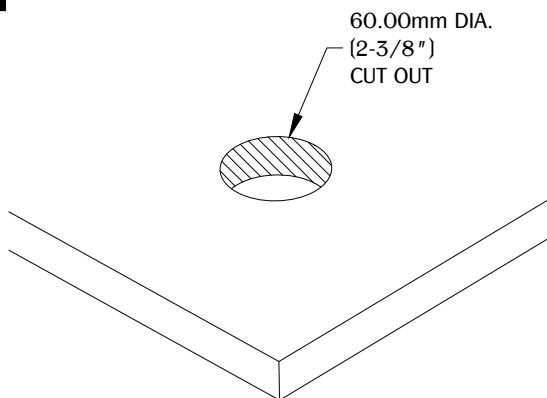

Make a cut out in the desired location on your work surface.  
Cut a hole at 60.00mm(2-3/8") diameter.

2

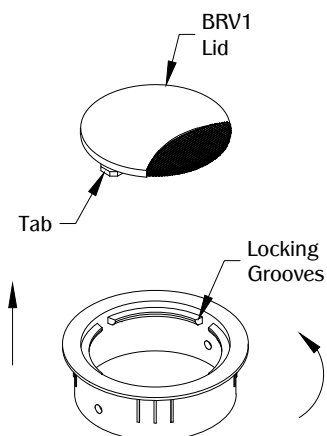


Remove BRV1 lid by rotating to match the tab to locking grooves and lifting from the brush opening.

## BRV1

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A  $\pm 1/32"$  TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

3

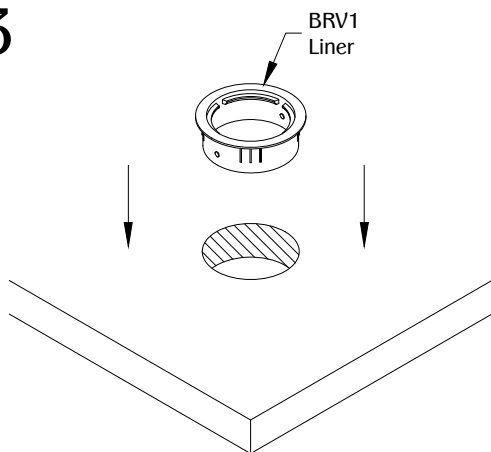


Install the BRV1 liner into the cut out and make sure it is fully leveled on the work surface.

4

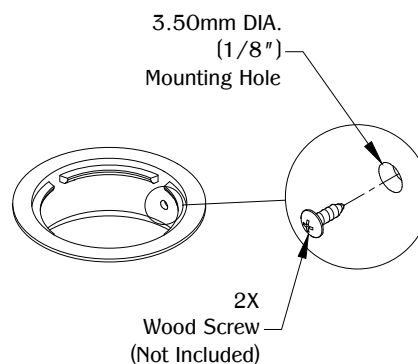

Use (2) wood screws to secure part onto the work surface. (Note: Use appropriate wood screw type and length depending on the material and thickness of the work surface.)

5

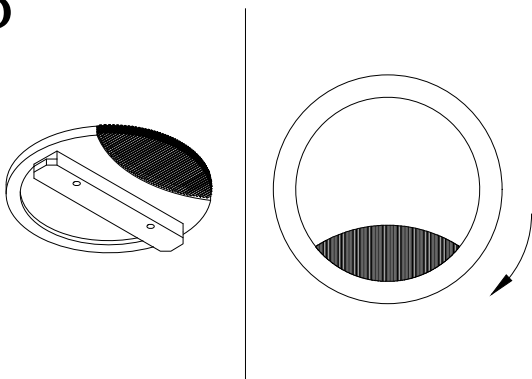

Install the BRV1 lid by aligning the tabs to locking groove and rotating BRV1 lid clockwise to lock.