

CPU8

310.318.2491 - 800.523.1269 - www.mockett.com

CPU8

INSTALLATION INSTRUCTIONS

1. Position CPU8 under table or work surface.
2. Use #8 wood/tapping screws to attach CPU8. (Qty of 4 Not included)
Use appropriate screw length.
(Example: Table thickness is 1", use 3/4" long screws)
3. When securing CPU8 do not over tighten the screws as this may cause unit to crack.
4. Place CPU tower into CPU8 and use knob to open counter-clockwise and to close clockwise. Tighten until CPU fits snugly.

MAXIMUM CPU WEIGHT: 30 POUNDS

CPU HEIGHT: 10" TO 15"

