


CHARGING OPERATION

1. When charging your PCS101 for the first time, it is important to leave the unit connected to the charger for 4 hours after the display indicates a full charge, to ensure long lasting battery life. This step is only necessary for the first time PCS101 is charged.
2. Fully charged in 4 hours.
3. CANNOT CHARGE PHONE WHILE CHARGING UNIT
4. Cord specifications 5.0 Volts at 4 Amps
5. Three 2amp USB charging ports
6. 11,600 mAh battery capacity

BATTERY DISPLAY

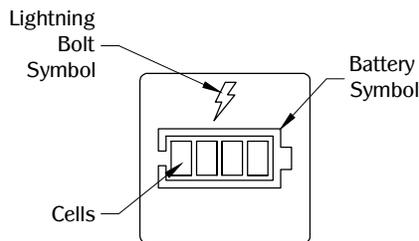

Lightning Bolt Symbol

The lightning bolt will only display while unit is connected to the charger.

- "Flashing" lightning bolt means the unit is charging.
- "Solid" lightning bolt the unit is fully charged.

Cells - battery charge level

- 1 cell: 0-25%
- 2 cells: 25-50%
- 3 cells: 50-75%
- 4 cells: 75-100%

Battery

- "Flashing" battery with no cells means the unit is depleted. (display will remain lit but you will not be able to charge devices. This protects the battery from being overdrawn)

WARNINGS

- Do not disassemble
- Do not penetrate unit with foreign objects
- Avoid strong impacts
- Do not crush
- Do not incinerate
- Avoid prolonged exposure to heat above 60°C
- Do not microwave unit, place in high pressure containers or induction heating devices
- Failure to comply may cause electrical and/or fire hazards resulting in serious injury

MAINTENANCE


HOW TO STORE

Store in a cool dry place. Ideal storage temperature range -20C to 60C. Additionally, if left unused for long periods of time (2+ months), the unit should be placed on the charger for 2 hours for every 2 months left unused. This helps keep the battery healthy.


CLEANING INSTRUCTIONS

- Wipe with damp cloth. If necessary, a mild detergent may be applied to the cloth.
- Do not submerge in water.
- Do not spray unit directly with water or cleaner

TABLE OF CONTENTS:

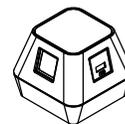

.....1 X PCS101

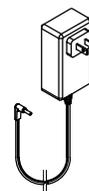

.....1 X 5V/4Amp AC Adapter