MOCKETT

PART #

310.318.2491 • 800.523.1269 • www.mockett.com



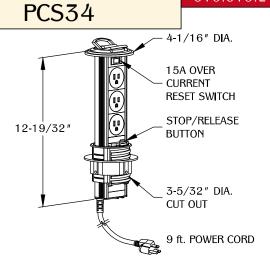


TABLE THICKNESS: 1/2" MIN. to 2" MAX.

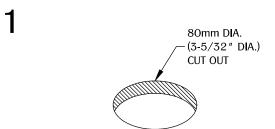


Make a cut out in the desired location on your work surface. Place near a power outlet and allow enough clearance for unit operation. <u>DO NOT</u> place unit where the cable is strained or trapped.

2

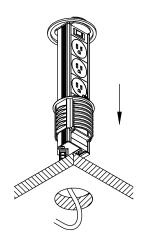

Remove the Threaded Lock Ring with the rubber washer. Guide the power cord through the cut out. Install the unit into the cut out and make sure it is fully leveled onto the surface.

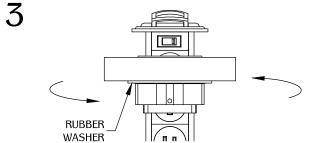

Guide the Threaded Lock ring through the power cord. Screw threaded lock ring onto mounting collar by turning clockwise. Locking ring should rotate smoothly if properly engaged. If not, the locking ring may be cross-threaded - undo and try again. Ensure rubber washer is tightly compressed against the underside of work surface.

Ensure that the power to the unit is off prior to cleaning. Clean with a damp cloth and mild detergent then dry immediately. Do not use harsh chemical solvents. Do not attempt to close the unit with power cords still connected to the outlets. Never force the unit down or up - always check that there are no obstructions which would interfere with the operation of the unit before using or stowing the unit.

NOTE:

THE PCS34 HAS A PROTECTION RATING OF IP54 (CATEGORY 2) IN A ACCORDANCE WITH BS EN60529: 1992 WHEN IN THE RETRACTED POSITION ONLY. THIS PREVENT ANY WATER INGRESS INTO THE UNIT FROM SPLASHING WATER AND ALSO PROVIDES DUST PROTECTION. CARE SHOULD BE TAKEN TO PREVENT THE POSSIBILITY OF WATER INGRESS INTO THE UNIT DURING USE. THE UNIT SHOULD BE CONNECTED TO A POWER SUPPLY WITH A GROUND FAULT CIRCUIT INTERRUPTER (GFCI) DEVICE.

Caution:

- To reduce the risk of electric shock use only indoors.
- Risk of electric shock. Do not plug into another relocatable power tap.