



1. Place PCS48G at the desired surface edge.
2. Hand tighten both bottom fasteners.



USB PLUGS FOR CHARGING USE ONLY

