



INSTALLATION INSTRUCTIONS

EDGE TABLE MOUNTING

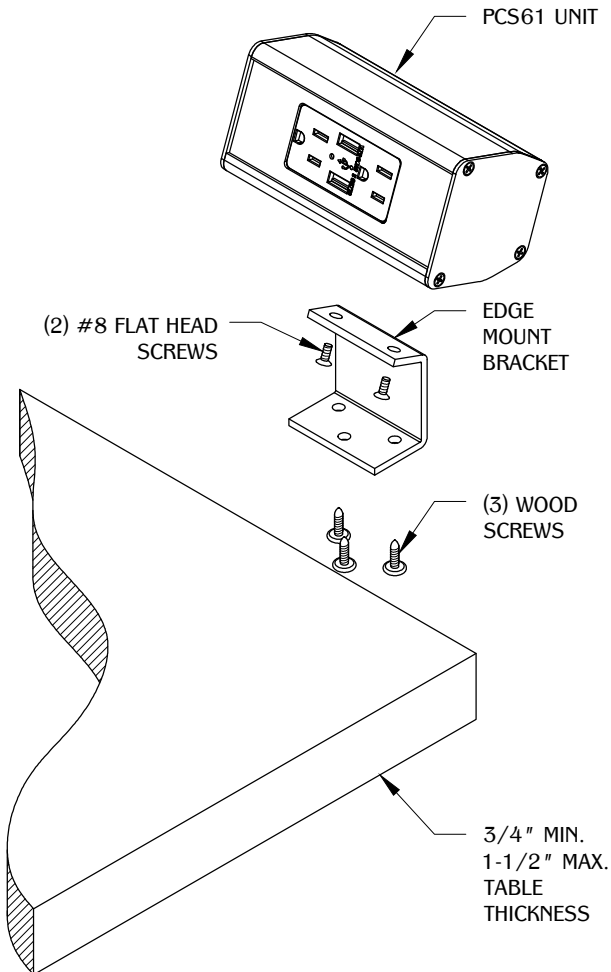

UNDER TABLE MOUNTING

 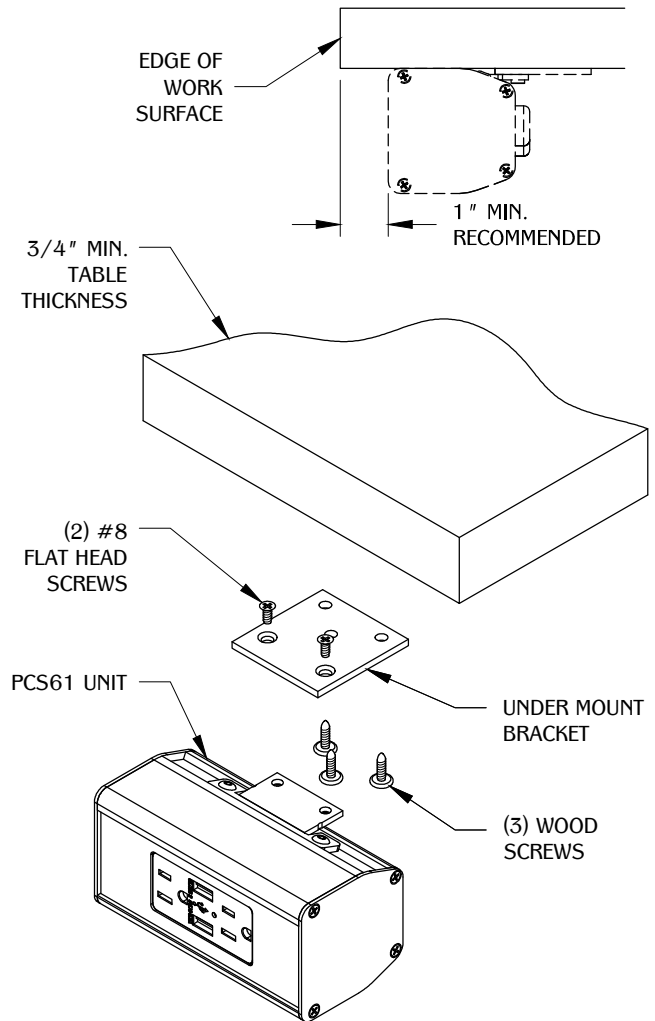


 



1. DETERMINE IF PCS61 IS TO BE EDGE OR UNDER TABLE MOUNTED. SEE ILLUSTRATIONS ABOVE.
2. ATTACH EITHER EDGE MOUNT OR UNDER TABLE BRACKET TO PCS61 USING 2 #8 FLAT HEAD MACHINE SCREWS, PROVIDED.
3. DETERMINE LOCATION FOR PCS61 AND ATTACH TO TABLE, AS SHOWN, USING (3) WOOD SCREWS, PROVIDED (NOTE: USE CAUTION TO NOT PIERCE TOP SURFACE OF TABLE WITH SCREWS, MINIMUM TABLE THICKNESS 3/4" THICK.)
4. PLUG THE UNIT INTO NEARBY OUTLET (OUTLET SHOULD BE CLOSE ENOUGH TO WHERE POWER CORD IS NOT TAUT OR STRAINED) AND UNIT IS READY FOR USE.

NOTE:

- USB PORTS ARE FOR CHARGING USE ONLY.

TABLE OF CONTENTS:

1 X PCS61C (2 POWER & 2 USB-A)
3 X 3/4" #10 BUTTON HEAD WOOD SCREWS
2 X 5/16" #8 -32 THREAD FLAT HEAD MACHINE SCREW
EDGE MOUNT BRACKET
UNDER MOUNT BRACKET