

## **MOCKETT**

PCS66G/2/U2

310.318.2491 • 800.523.1269 • www.mockett.com

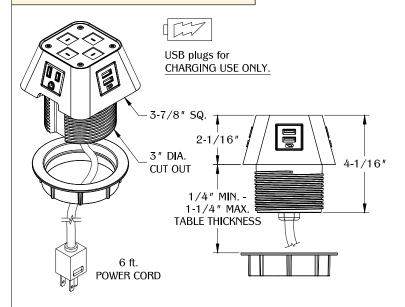


1

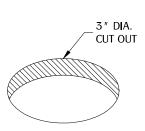


Make a cut out in the desired work surface.

2

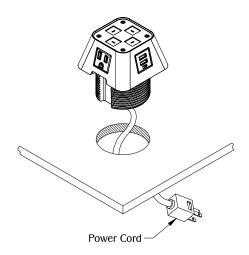


Guide the power cord through the cut out. Install PCS66G/2/U2 into the cut out and make sure it is fully leveled onto surface.

3

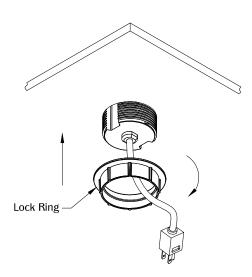


Guide the power cord through the lock ring. Secure the unit by turning the lock ring clockwise.

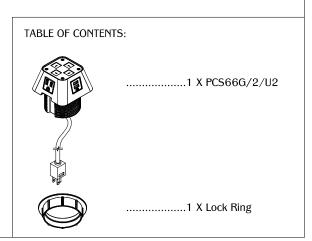


PART #

## PCS66G Top

310.318.2491 • 800.523.1269 • www.mockett.com

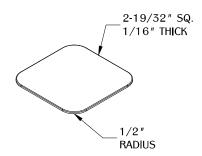


1

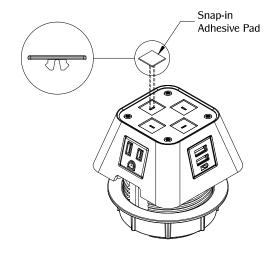


Align the Snap-in Adhesive pads to the top of the unit.

2

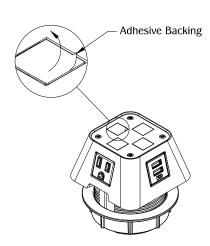


3

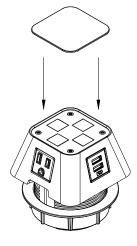

Peel off the adhesive backing on 4 places.

Align the top to the unit.

4

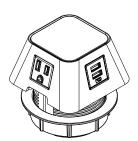

Press down gently to secure the top.

TABLE OF CONTENTS:



