



TLEL4

DOUG MOCKETT & COMPANY, INC.

310.318.2491 • 800.523.1269 • www.mockett.com



Use the cross braces to connect the two frames. Slide the braces into the ends of the frames and make sure the cut outs on the braces are facing inward (Note: smaller lip of the cut out should be closest to the table top). Please see diagram for example.



Turn the TLEL4 setup onto it's feet and guide the (2) top supports onto the ends of the frames. Secure the top supports with (2) hex flat head screws.



Press fit (10) rubber grommets into the remaining holes on the top supports. Adjust the TLEL4 setup accordingly to the desired width and secure the frames by screwing in (8) hex button cap screws underneath.



Set table top onto the top supports and adjust into the desired position. Once aligned, drill pilot holes. Secure table top by using (8) wood screws as shown. (Note: Recommend using 1/16" DIA. pilot holes for wood material work surfaces.)

* * Weight Capacity: 260 lbs. per set



Secure the control box between the the frame using (2) wood screws as shown. Connect the cords attached to the TLEL4 legs to the control box. Use the extension cord that is provided to connect one of the legs to the control box.

any loose cabling.) WARNING: You must initialize the system before use.

Initialization/Reset

The TLEL4 will only need to be initialized/reset after the following:

- After assembly
- After system is stuck with an error



on the under side of the table top using (2) wood

Connect power cord to control box and plug into a power outlet. (Note: Use wire managers to tidy up

screws. Plug the CAT 5 cable attached to the controller into the CAT 5 port on the control box.

- 1.) Hold the down arrow button until you hear a beep and the screen will briefly flash RST (reset). Your system has now been initialized and reset to factory settings.
- 2.) If your TLEL4 is being powered for the first time it will be at it's lowest height and you will hear a beep after approximately 5 seconds.
- 3.) Once you hear the beep you can release the button and the procedure is complete.

If your TLEL4 is stuck in position and displaying an error message, it is necessary to re-initialize the system.

- 1.) Hold down the down arrow button. After 5-10 seconds it will slowly start to lower to its lowest height.
- 2.) Once it reaches the lowest height, keep holding the down arrow for an additional 5 seconds until you hear the beep and RST (reset) will flash on the display.
- 3.) If you do not hear a beep, release the button for a few seconds and then re-press it for an additional 5 seconds. Once you hear the beep the reset is complete.



DOUG MOCKETT & COMPANY, INC.

TLEL4

310.318.2491 • 800.523.1269 • www.mockett.com

Operating TLEL4 Controller

- 1. Press 'Up' arrow button, to move the legs up.
- 2. Press 'Down' arrow button, to move the legs down.
- Note: Hold down the buttons until the desired height has been reached.

Saving Memory Positions

This function allows you to save a certain table height. Up to 4 different heights can be saved. These saved positions can be changed at a later time.

- 1. Position the table at the desired height.
- 2. Press 'M' button (Memory).
- 3. Press one of the numbered 'Saved Position' buttons (1, 2, 3, 4) to save the desired height.
- 4. After saving, the current height will appear after a couple of seconds on the display.
- Note: If the position button is not pressed within a few seconds after pressing the 'M' button, nothing will be saved. The current height appears again on the display. You can overwrite saved height positions by simply repeating the procedure.

Moving to Memory Positions

- 1. Press (NOT HOLD) the desired saved position button (1, 2, 3, 4).
- 2. The TLEL4 will raise or lower itself to the saved position height.

Locking and Unlocking

- 1. To lock the desk in position hold the up and down arrow buttons at the same time for 5 seconds.
- 2. One this has been done none of the controller buttons will function. The display will show LCK (lock).
- 3. To unlock the desk, hold the up and down arrow buttons at the same time for 5 seconds. This will make all buttons fully functional.

Setting Minimum Height

- 1. To restrict how low your desk can go, move the TLEL4 down to the desired minimum height.
- Once you are at the desired minimum height press the 'M' button and down arrow at the same time. After a few seconds there will be a beep to confirm this has been saved.
- 3. To test the position was stored, move the desk up, and then back down. It should now stop at the limit that has just been set.
- 4. To remove the minimum height, move the TLEL4 to the set minimum height, then hold the 'M' button and down arrow for a few seconds until the controller beeps.

Setting Maximum Height

- 1. To restrict how high your desk can go, move the TLEL4 up to the desired maximum height.
- 2. Once you are at the desired maximum height press the 'M' button and up arrow at the same time. After a few seconds there will be a beep to confirm this has been saved.
- 3. To test the position was stored move the desk down, and then back up. It should now stop at the limit that has just been set.
- 4. To remove the maximum height, move the TLEL4 to the set maximum height, then hold the 'M' button and up arrow for a few seconds until the controller beeps.



DOUG MOCKETT & COMPANY, INC.

1 '

1″

1

TI FI 4

310.318.2491 • 800.523.1269 • www.mockett.com

1″

SAFETY INFORMATION

To reduce the risk of death, serious injury, or property damage, read and follow this safety information and the provided instructions when assembling this product. Do not change or replace components and accessories provided by MOCKETT.

INSTALL ONLY APPROVED WORK SURFACES

This table system does not include a work surface (desktop). Work surface must be at least 3/4" thick and weigh no more than 5lbs. per square foot (For example, a 2' x 6' desktop should weigh no more than 60 lbs). We recommend your table top not exceed 75 lbs. To prevent table from tipping or collapsing, make sure the desk frame is not overloaded by the weight of tabletop and objects you plan to put on the table.

KEEP AWAY FROM CHILDREN

This table system is not designed for use in homes or other areas accessible by small children. Recommended for indoor commercial office use.

BE CAREFUL WHEN ADJUSTING DESK HEIGHT

Body parts and property can be caught between the moving work surface and an immobile obstacle (such as shelves, furniture, window sills, or walls). Keep at least one inch of clearance around desk and make sure nothing is in table's path for its entire range of motion.

Before raising and lowering:

- Check surroundings on all sides of desk are clear
- Make sure corded objects will not be pulled off table or cause other objects to fall
- Make sure desk power cord moves freely as desk moves up and down.

DO NOT OVERLOAD DESK

To prevent table from tipping or collapsing, make sure the desk frame is not overloaded by the weight of tabletop and objects on table. Evenly distribute load; excess loads near edges can reduce stability and lead to tip over.

- Do not exceed maximum load (including maximum weight of desktop) of 260 lbs.
- Do not sit or stand on table.

USE CARE WHEN MOVING DESK

- Clear objects and equipment from table before moving to reduce the risk of tipping over
- Adjust the desk to its lowest height before moving
- To disconnect, turn all controls to the off position, then remove plug from outlet
- Do not move a loaded desk
- Do not lift the desk by the work surface (desktop)

DO NOT OPEN ELECTRICAL COMPONENTS

Do not attempt to service table components. There are no user-serviceable parts inside the motor control units or table legs. If your table needs service, contact MOCKETT.

KEEP TABLE FRAME DRY

Keep all electrical components away from water and high humidity. Clean only with a dry or slightly damp cloth. Do not spray cleaning solutions onto table system.