

## **MOCKETT**

PART #


## DH4

310.318.2491 • 800.523.1269 • www.mockett.com

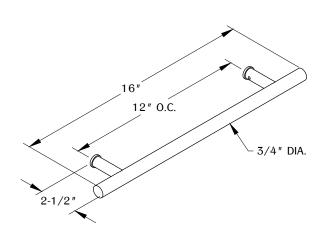


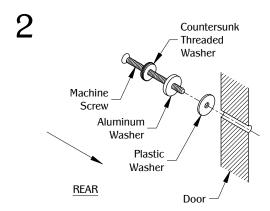


Assemble (1) machine screw, (1) countersunk threaded washer, (1) aluminum washer and (1) plastic washer at the back of the work surface. Align the assembly through the predrilled hole. (Note: Use 4" screw for thicker door.)

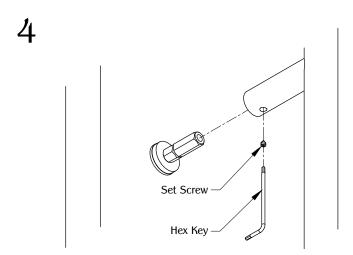

Align the DH4 to the assembled base. Secure it with the (2) set screw using the hex key.

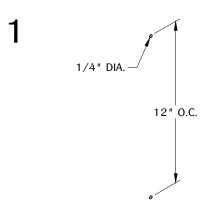

Determine the position and location of the DH4 at the work surface. Drill a 1/4 " diameter hole with the recommended on center dimension.

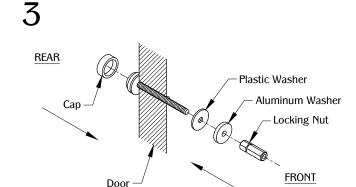

Assemble (1) aluminum washer, (1) plastic and (1) locking nut washer at the front of the work surface. Tighten the assembly. Finish the hardware assembly by installing the cap. Repeat Step 3 & 4 for the other side.

