



Step 1 Hold the tray in place to verify it has clearance.

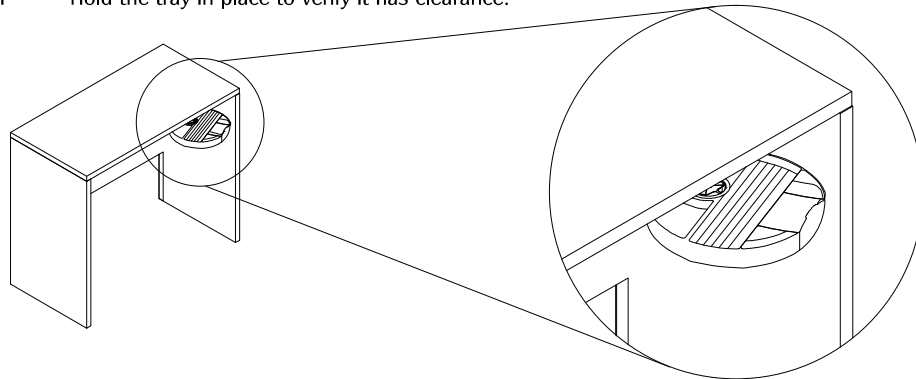

Step 2 Rotate to open and close to decide how far in you want to mount the DWR5A.

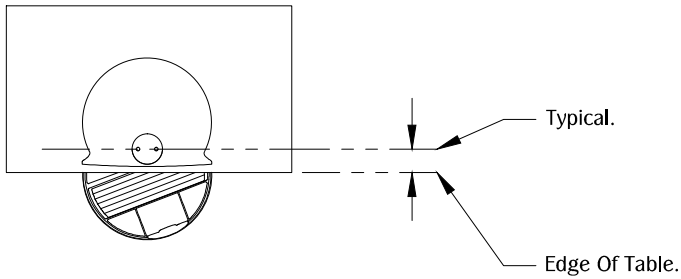


SCREW DISTANCE FROM EDGE OF TABLE.

Typical: 1-7/16"


Minimum: 1-1/8"

Maximum: 1-3/4"

Step 3 Be sure screw holes in center hub are straight and install screws.

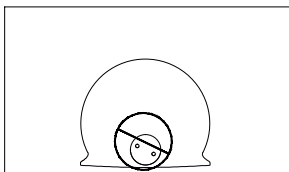

Holes misaligned.

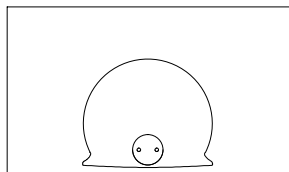

Holes Correctly aligned.

TABLE OF CONTENTS:



.....1 RADIUS JR. ORGANIZER.



.....2 X #10, 1-1/4" Pan Head Screws.