




## CT2

PROPRIETARY AND CONFIDENTIAL.  
ALL DIMENSIONS HAVE A +/- 1/16" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.


### TABLE OF CONTENTS

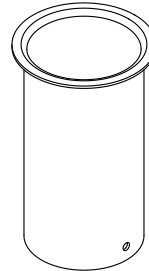

..... 1X CT2

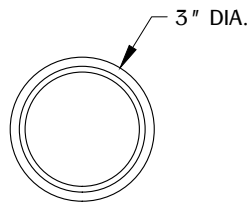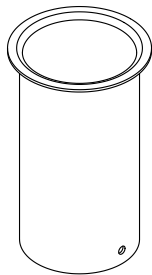



TOP VIEW

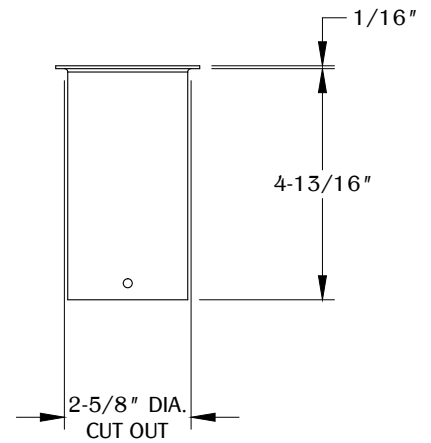

FRONT VIEW

1



2-5/8" DIA.  
CUT OUT

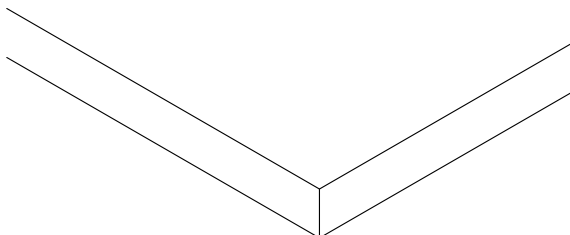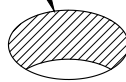

Determine the position and location of the part on the work surface. Make a 2-5/8" diameter cut out. Place and allow enough clearance for part function.

2

ADHESIVE

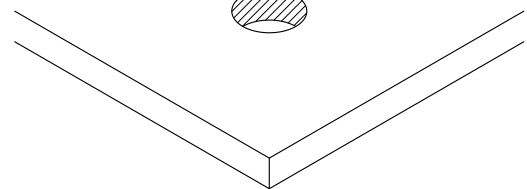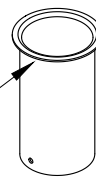

Apply silicone adhesive on the sleeve for more secure installation. Install the part into the cut out and make sure the part is fully leveled on the work surface.