

PCS114/UC

PROPRIETARY AND CONFIDENTIAL.
ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.


⚠ WARNING ⚠

- Plug into an appropriate outlet that is properly installed and grounded in accordance with all local codes and regulations.
- For indoor use only.
- For use on normally dry work surfaces only.
- If any malfunction occurs, do not attempt to disassemble or repair.
- Allow enough clearance for part operation and function.
- Avoid liquid spills into outlet.
- Do not insert foreign objects into power outlets or USB ports.


SPECIFICATIONS

- 6 ft. cord length.
- USB-A & USB-C ports are for charging use only.
- Recommended table thickness is 3/4" MIN. to 1-1/2" MAX.
- Recommended cut out is 6-25/32" X 4-3/4".

TABLE OF CONTENTS

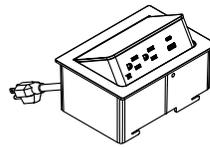

..... 1X PCS114/UC

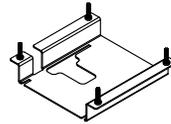



..... 1X Retaining Bracket




..... 2X 1/2" No. 8 Pan Head Wood Screw



..... 2X Wire Guide

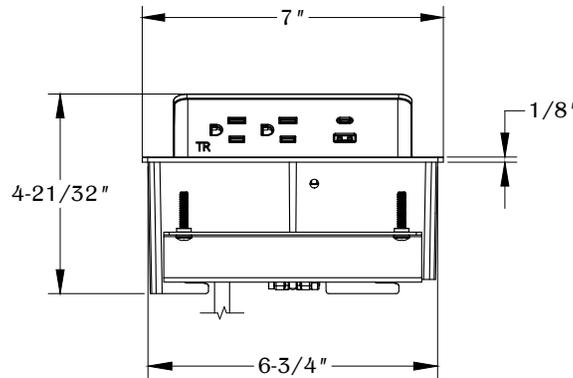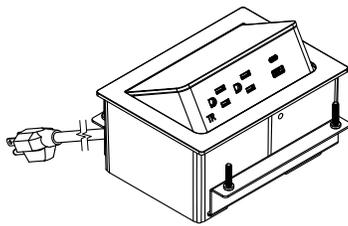


FRONT VIEW

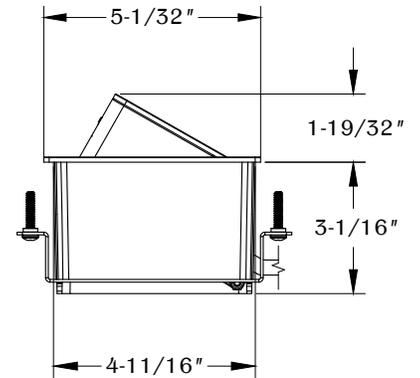


RIGHT VIEW

1

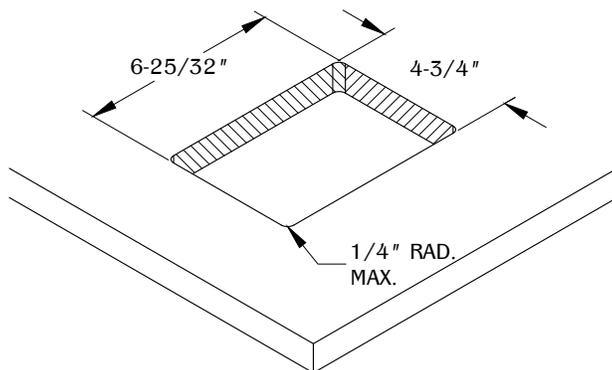

Determine the position and location of the unit on the work surface. Make a cutout in the desired location on your work surface. Allow enough clearance for unit operation. DO NOT place unit where cable is strained or trapped.

2

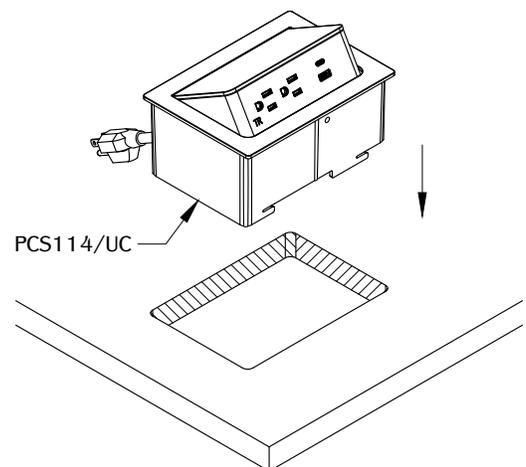


Remove the retaining bracket from the unit. Guide the cord through the cutout. Install the unit into the cutout and make sure it is fully level onto the work surface.

PCS114/UC

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

3

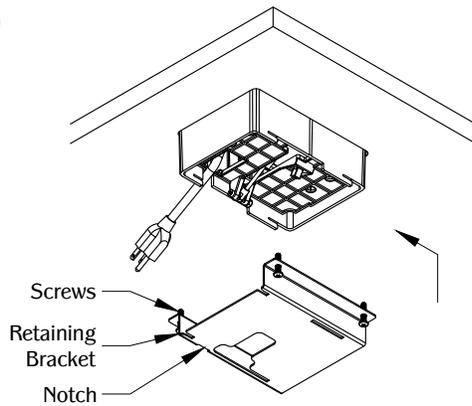


Adjust the screws on the retaining bracket. Route the cord through the notch of the retaining bracket. Install the retaining bracket to the bottom of the unit by aligning the tabs on the PCS114/UC with the slots on the retaining bracket and slide into place.

4

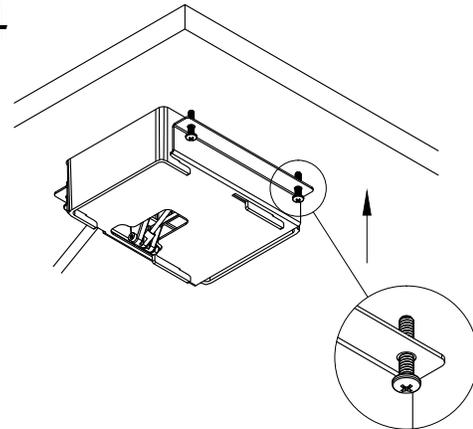

Secure the unit by tightening the screws on the retaining bracket. Plug unit into a nearby outlet and unit is ready for use.

5

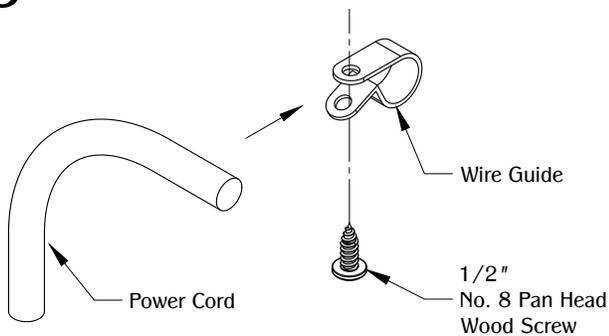

Place the power cord in the (2) wire guide. Align the (2) 1/2" No. 8 pan head wood screw with the mounting holes. Install the wire guide under the work surface. Repeat step for second wire guide.