

## PCS133

PROPRIETARY AND CONFIDENTIAL.  
ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.


### ⚠ WARNING ⚠



- For indoor use only.
- For use on a normally dry work surface.
- If any malfunction occurs, do not attempt to disassemble or repair.
- Avoid placing the unit in a high temperature environment or near fire.
- Avoid liquid spills into outlet.
- Do not insert foreign objects into the socket.
- Allow enough clearance for part operation.
- Avoid cleaning the unit while it is plugged in.

### SPECIFICATIONS


- 6 ft. cord length.
- USB-A and USB-C ports are for charging use only.
- Recommended table thickness is 1/2" MIN. to 1-1/2" MAX.

### TABLE OF CONTENTS

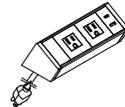	..... 1X PCS133
	..... 4X 1/2" No.2 Wood Screw
	..... 2X Clamp Mount Bracket
	..... 2X Under Mount Bracket
	..... 2X Thumb Screw

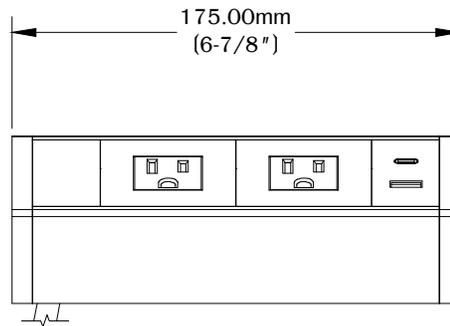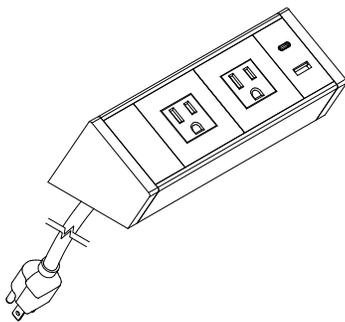


FRONT VIEW

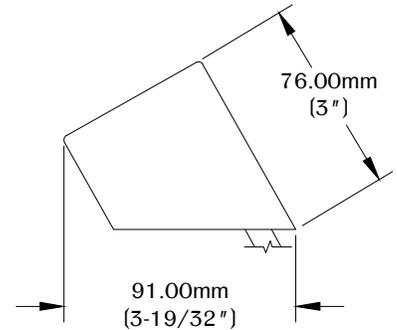


SIDE VIEW

### 1 Clamp Mount

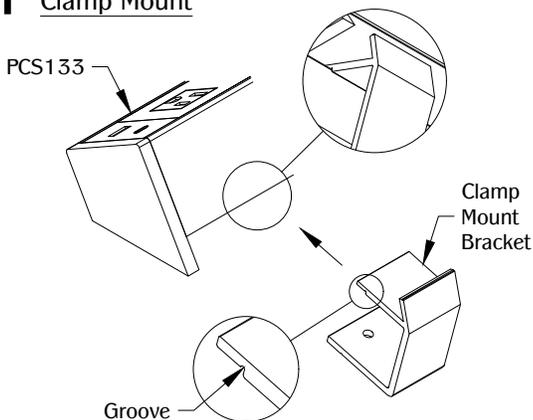

Place clamp mount bracket at the back of the unit. Align the groove on the bracket to the mounting track.

### 2

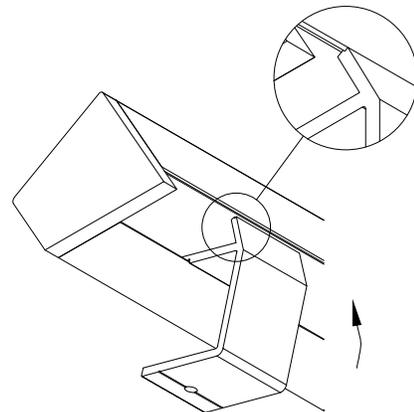


Hook the (2) clamp mount brackets to the back bottom track. Once attached, tilt the (2) brackets up until they align with the back of the unit.

## PCS133

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

### 3

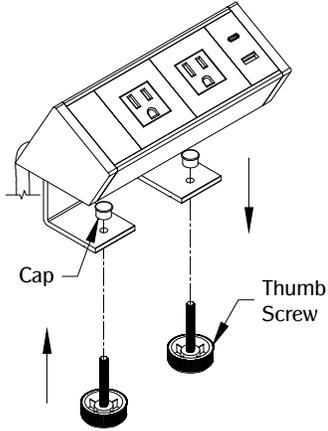


Install the thumb screws and caps to the clamp mount brackets.

### 4

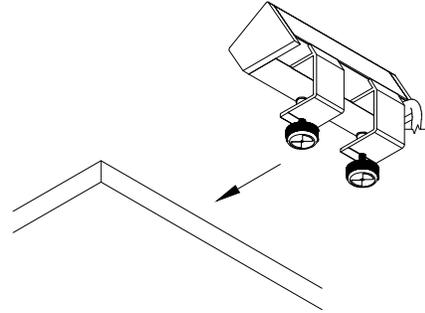

Determine the position and location of the PCS133 on the edge of the work surface. DO NOT place the unit where the cable is strained or trapped.


### 5

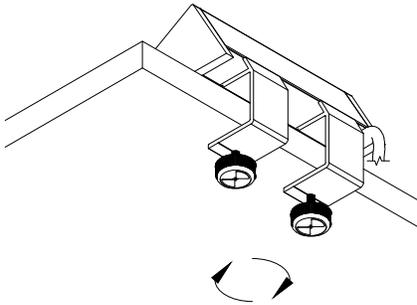

Make sure the PCS133 is fully leveled onto the work surface. Secure the unit by tightening the thumb screws. Plug the unit into a nearby outlet and the unit is ready for use.


### 1

#### Under Mount

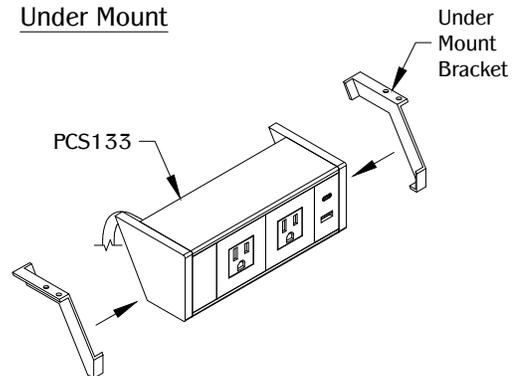


Align and slide the (2) under mount brackets onto the PCS133.

### 2

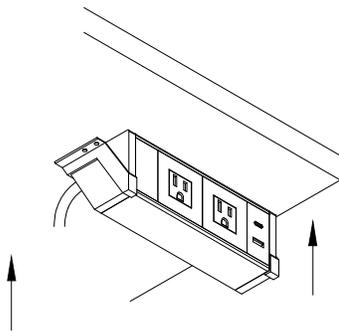

Determine the position and location of the PCS133 underneath the edge of the work surface. DO NOT place the unit where the cable is strained or trapped. Allow 1/4" clearance from the edge.

### 3

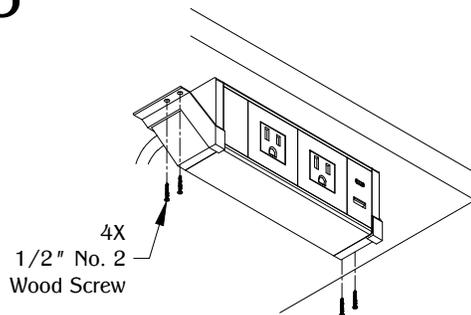

Secure under mount bracket with the (4) 1/2" No. 2 wood screws. (Note: Use the appropriate mounting hardware type and length depending on the material and thickness of the work surface.)