

PCS67E/3/UC

PROPRIETARY AND CONFIDENTIAL.
ALL DIMENSIONS HAVE A +/- 1/16" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.


⚠ WARNING ⚠

- For indoor use only.
- For use on a normally dry work surface.
- If any malfunction occurs, do not attempt to disassemble or repair.
- Allow enough clearance for part operation.
- Avoid liquid spills into outlet.
- Do not insert foreign objects into the socket.
- Avoid placing the unit in a high temperature environment or near fire.

SPECIFICATIONS

- 6 ft. cord length.
- Plug dimension is 1-11/32" X 1-1/32" X 7/8".
- USB-A & USB-C ports are for charging use only.
- See Step 2 for table thickness.

TABLE OF CONTENTS

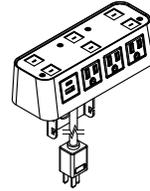

..... 1X PCS67E/3/UC



..... 1X Thumb screw



..... 1X Bracket





..... 2X Top




..... 6X Snap-In Adhesive pad



..... 1X Wire Manager

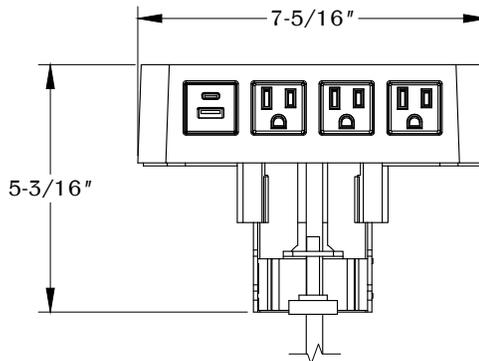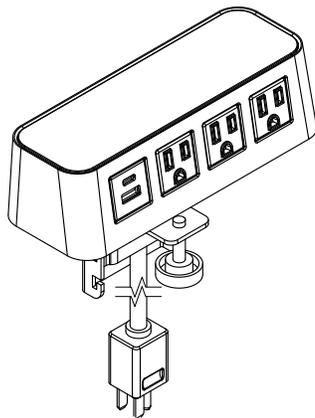


FRONT VIEW

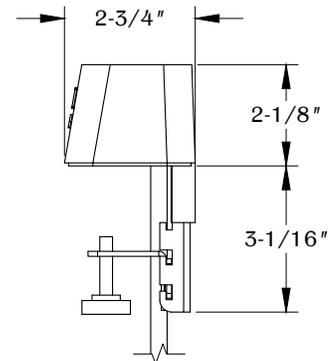


RIGHT VIEW

1

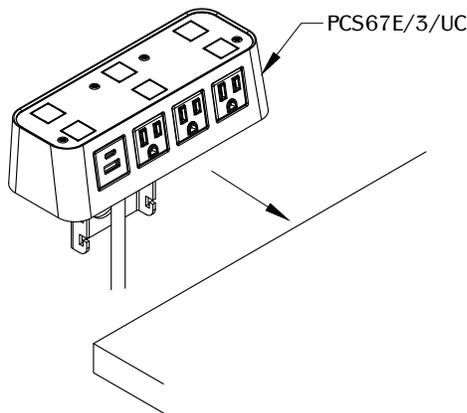

Install the unit at the desired edge of the work surface. Make sure the unit is fully leveled onto the work surface. Allow enough clearance for unit operation. Do NOT place unit where cable is strained or trapped.

2

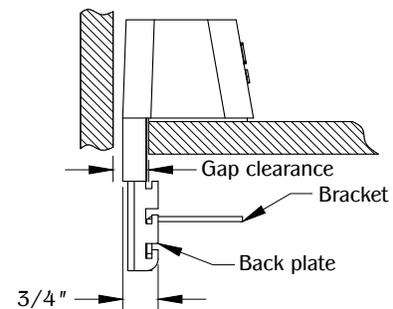

Bottom Orientation
1-1/4" MIN. to 2-3/4" MAX.
Table thickness 7/8" MIN. Gap clearance


Top Orientation
1/2" MIN. to 1-3/4" MAX.
Table thickness 3/4" MIN. Gap clearance

Determine the table thickness and orientation of the bracket. Install the bracket to the back plate of the unit.

PCS67E/3/UC


PROPRIETARY AND CONFIDENTIAL.
ALL DIMENSIONS HAVE A +/- 1/16" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

3

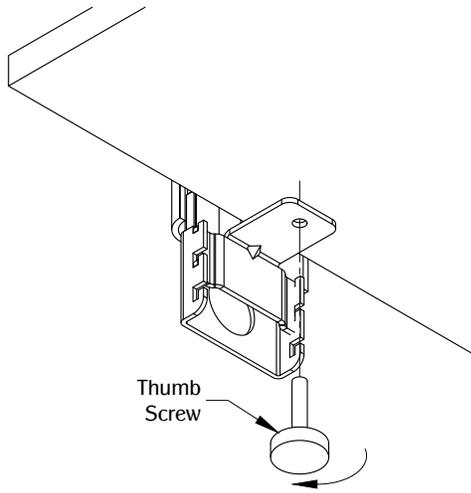


Secure the unit by aligning the thumb screw to the bracket and turning clockwise.

4

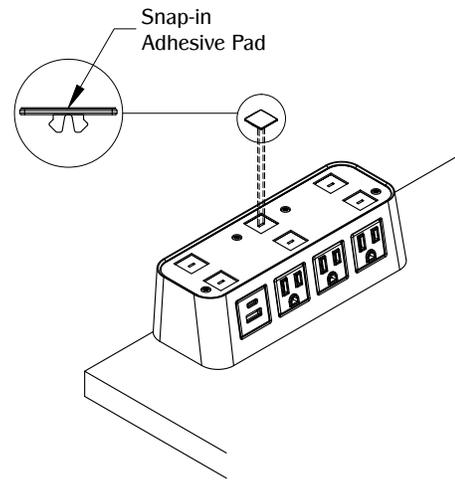


Align the (6) Snap-in adhesive pads to the top of the unit.

5

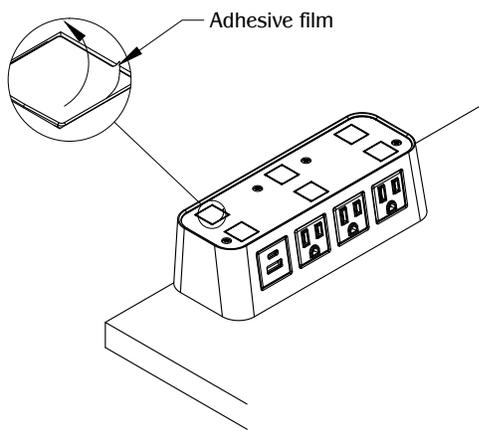


Peel off the adhesive film on all six snap-in adhesive pads.

6

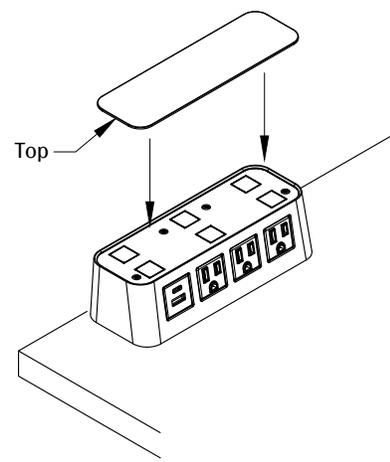

Align the top to the unit. Make sure it is fully leveled onto the top surface. Plug the unit into a nearby outlet and unit is ready for use.

7

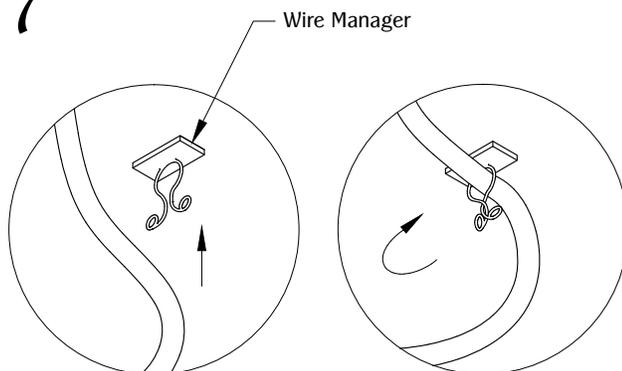

Affix optional wire manager under desk for cable management.