

PCS91/UC

PROPRIETARY AND CONFIDENTIAL.

ALL DIMENSIONS HAVE A $\pm 1/16"$ TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.



WARNING



- For indoor use only.
- For use on a normally dry work surface.
- If any malfunction occurs, do not attempt to disassemble or repair.
- Avoid placing the charger in a high temperature environment or near fire.
- Unit must be connected to a compliant wall outlet with ground connection.

SPECIFICATIONS


- 6 ft. cord length.
- USB-A and USB-C ports are for charging use only.
- Recommended cutout is $5-7/8"$ X $13-5/8"$.
- Recommended table thickness is $3/4"$ MIN. to $2"$ MAX.
- Circuit breaker reset is located under the unit inside the data compartment.

TABLE OF CONTENTS

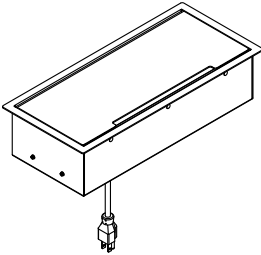
	1X PCS91/UC
	2X Mounting Bracket
	4X 2" Spade Head 10 - 32 Thread Thumb Screw

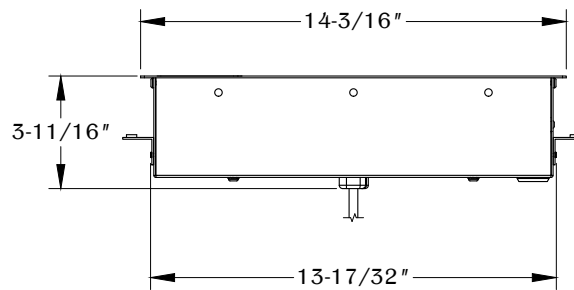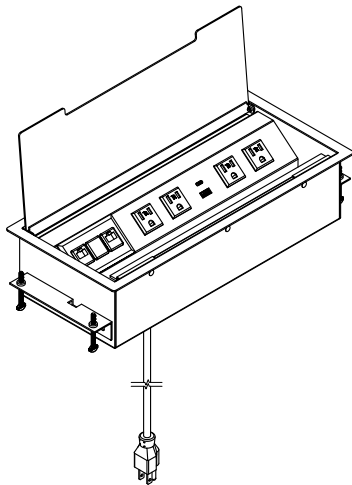


FRONT VIEW

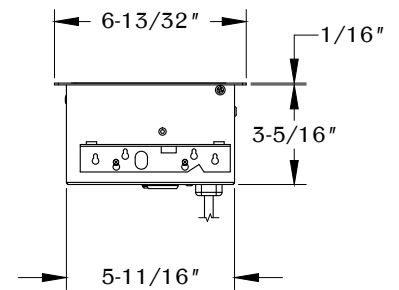

RIGHT VIEW

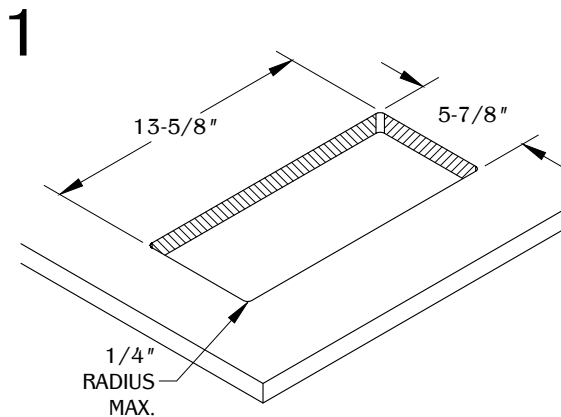

Determine the position and location of the unit on the work surface. Make a cutout in the desired location on your work surface. Place and allow enough clearance for unit operation. DO NOT place unit where the cables are strained or trapped.

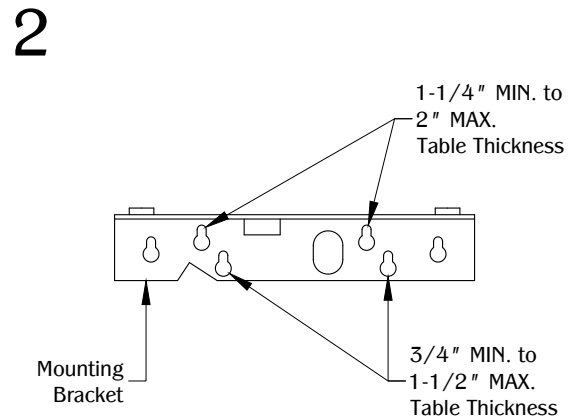


Determine the table thickness. Use the recommended guide above for the key slots on the mounting bracket.

PCS91/UC

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A $\pm 1/16"$ TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

3

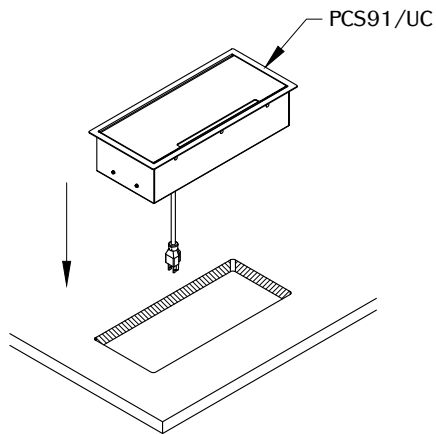


Guide the cord into the cutout. Install the PCS91/UC into the cutout and make sure it is fully level onto the work surface.

4

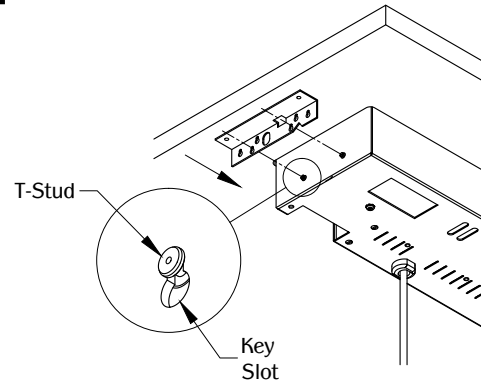

Align the (2) mounting bracket key slots to the T-studs on the undersides of the unit.

5

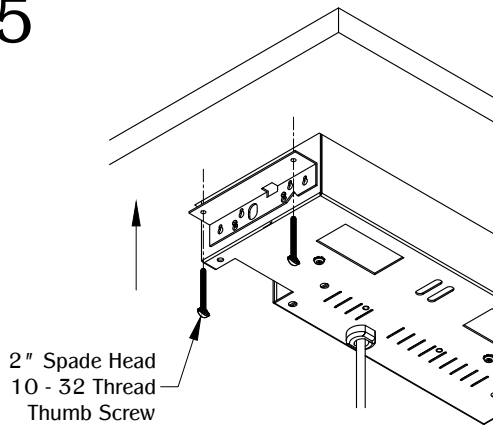

Align and tighten the (4) thumb screws on the mounting brackets. Plug the unit into a nearby outlet and unit is ready for use.