


SIGN4

PROPRIETARY AND CONFIDENTIAL.
ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

TABLE OF CONTENTS

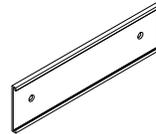



..... 1X SIGN4

HARDWARE REQUIREMENTS (NOT INCLUDED)




..... 2X
No.4 Flat Head
Wood Screw

| | (A) LENGTH | (B) C.T.C. |
|--------|---------------|---------------|
| SIGN4A | 8" | 6" |
| SIGN4B | 10" | 8" |

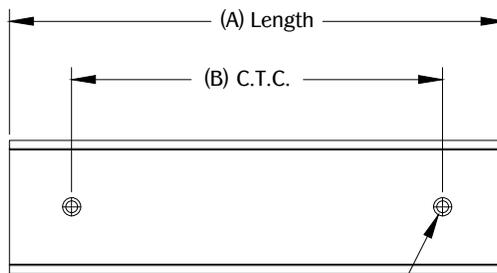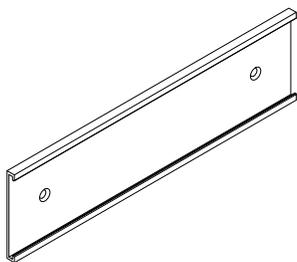


2X
3/16" DIA.
COUNTERSUNK
TO 9/32" DIA.

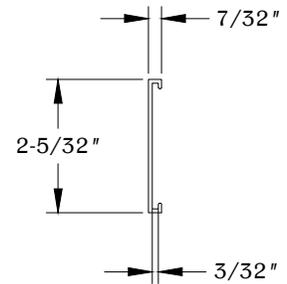

FRONT VIEW


SIDE VIEW

1

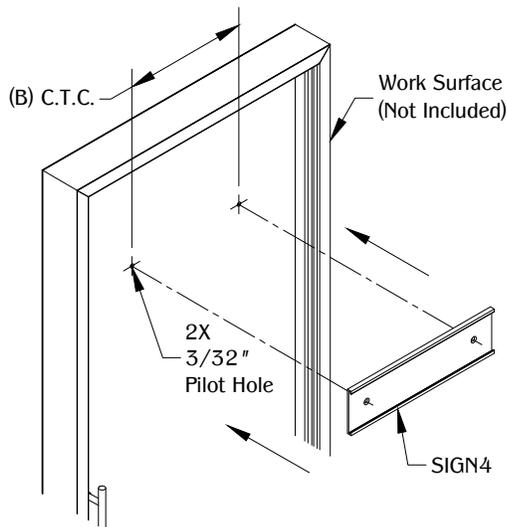

Determine the horizontal position and location of the part on your work surface. Mark the mounting positions and drill (2) 3/32" pilot holes for the mounting hardware. Allow enough clearance for part function. Level and align the part on the work surface.

2

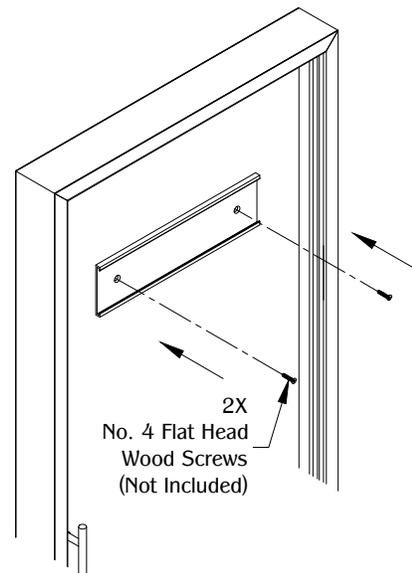


Secure with (2) No. 4 flat head wood screws. (Note: Use appropriate mounting hardware type and length depending on the material and thickness of the work surface.)

SIGN4

PROPRIETARY AND CONFIDENTIAL.
ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

3

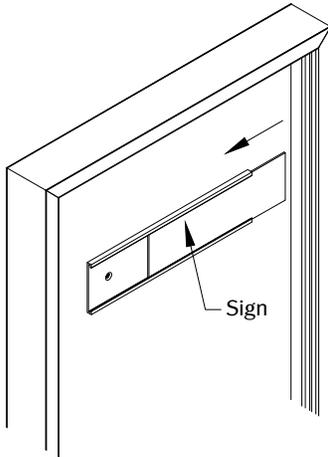

Slide a sign into SIGN4 from either side.