
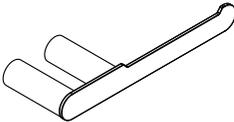
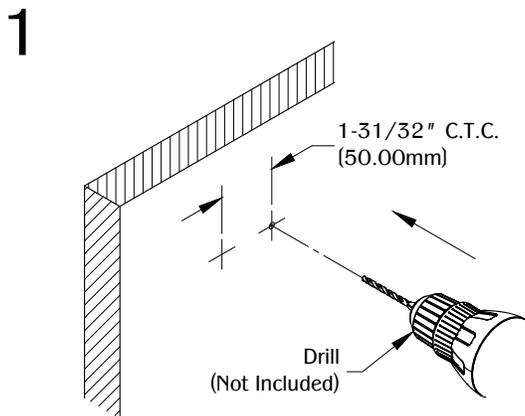


## TPH75


PROPRIETARY AND CONFIDENTIAL.  
ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

### TABLE OF CONTENTS

	..... 1X TPH75
	..... 2X Mounting Base
	..... 2X M5 X 0.8 Set Screw
	..... 2X 1-3/16" No. 6 Flat Head Wood Screw
	..... 2X Plastic Anchor
	..... 1X Hex Key

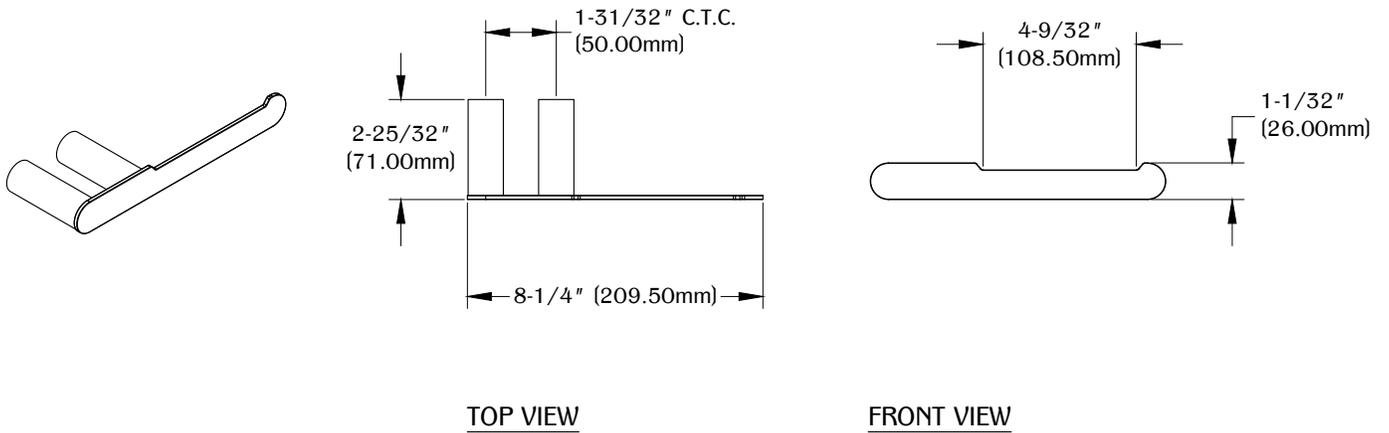

Determine the position and location of the part on the work surface. Mark the mounting positions for the mounting hardware and drill 3/16" diameter pilot holes for drywall installation or 3/32" diameter pilot holes for wood installation.

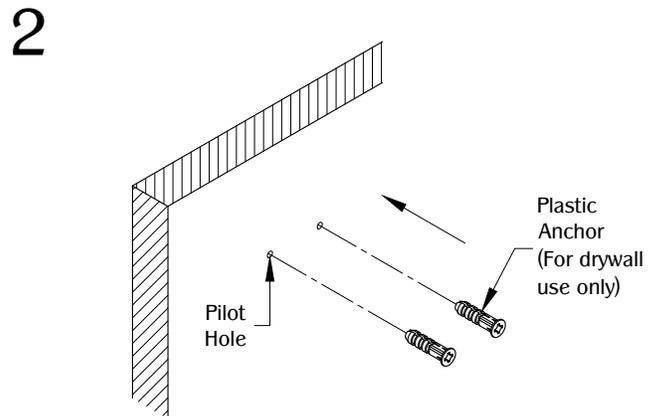


Install the (2) plastic anchors into the pilot holes. (Note: Skip this step for wood installation.)

## TPH75

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A +/- 1/32" TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

### 3

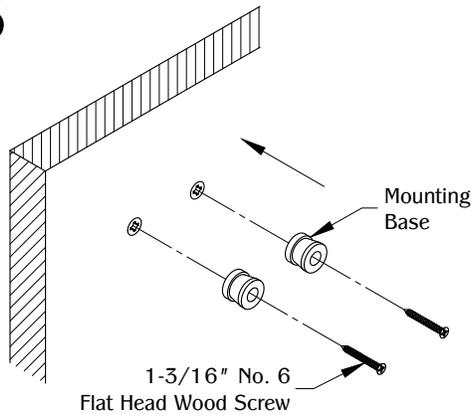


Position the mounting base so it aligns with either the pre-drilled pilot holes or the installed plastic anchors. Then, use (2) 1-3/16" No. 6 flat head wood screws to secure it. Make sure the mounting base is level onto the work surface.

### 4

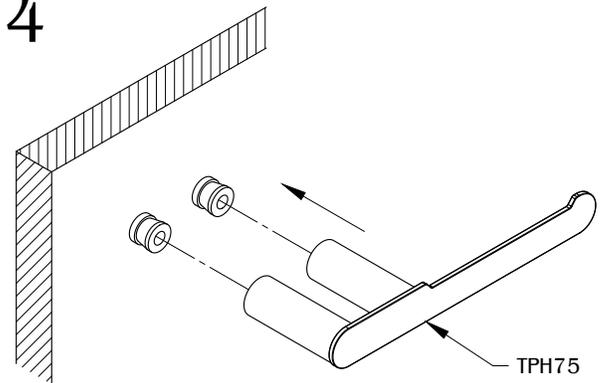

Install the TPH75 onto the mounting base, making sure it is level and aligned.

### 5

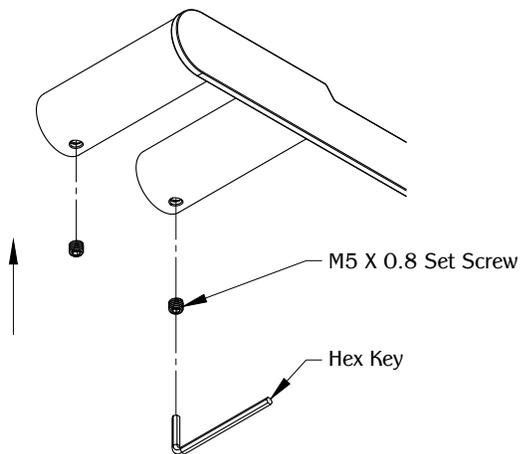

To secure the TPH75, locate the M5 X 0.8 set screws on the underside and tighten it.