


FIGURE 1

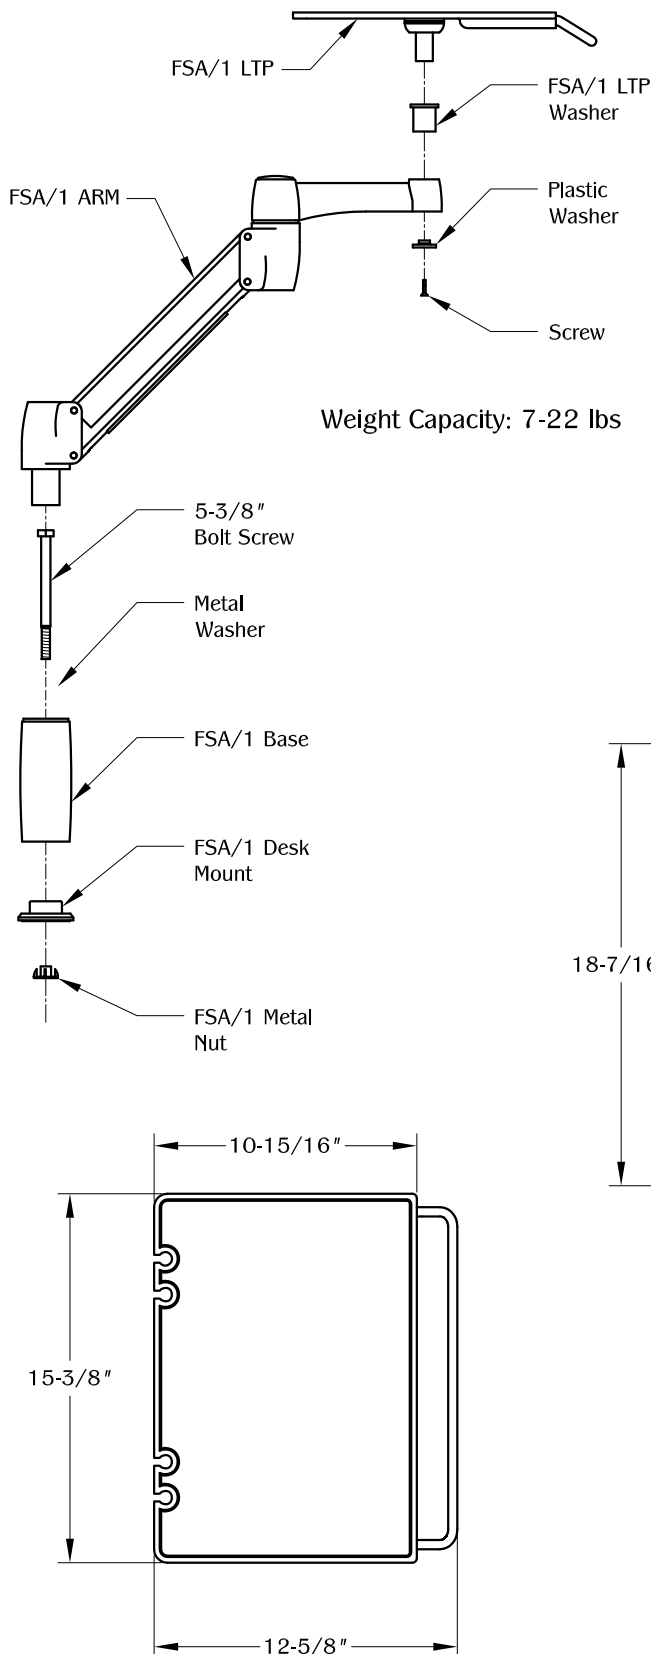

1. Use the Figure 1 diagram, to mount the FSA1/LTP in a 'Bolt Through' mount.
2. Drill 15/32" (12mm) hole in desk surface.
3. Place desk mount on top of the new drilled hole.
4. Place the base of the FSA/1 on top of the desk mount.
5. Place the washer before inserting the bolt screw.
6. Secure the bolt screw with the FSA/1 metal nut.
7. Place the arm on top of the base.
8. Insert the FSA1/ LTP washer before placing the FSA/1 LTP.
9. Secure the FSA/1 LTP by placing the plastic washer under the FSA/1 Arm and tightly screw it.

