



1

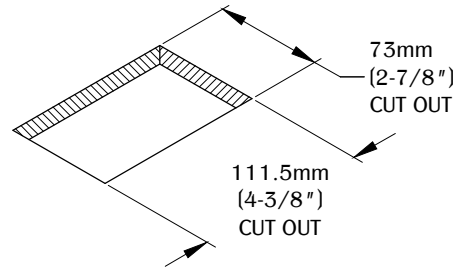

Note: Recommended cut out will require adhesive to secure into the work surface. Use 111.5mm X 71mm (4-3/8" X 2-25/32") for a tighter fit.


Determine the position and location of the unit on the work surface. Cut the hole at 111.5mm X 73mm (4-3/8" X 2-7/8").

2

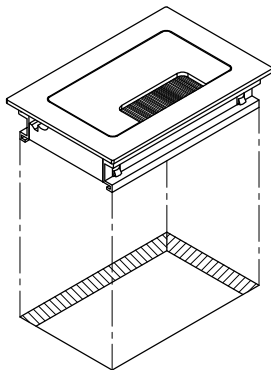

Install MAX8/A into the cut out and be sure it is fully level on the surface.

TABLE OF CONTENTS:



.....1 X MAX8/A