


## MM3A


PROPRIETARY AND CONFIDENTIAL.

ALL DIMENSIONS HAVE A  $\pm 1/32"$  TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.


### TABLE OF CONTENTS

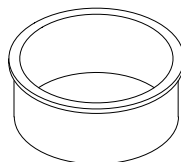

..... 1X MM3A

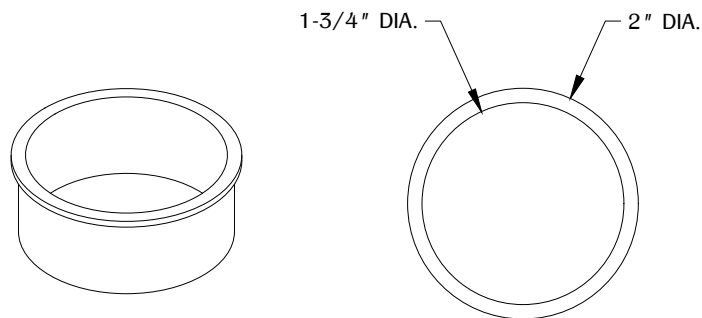


TOP VIEW

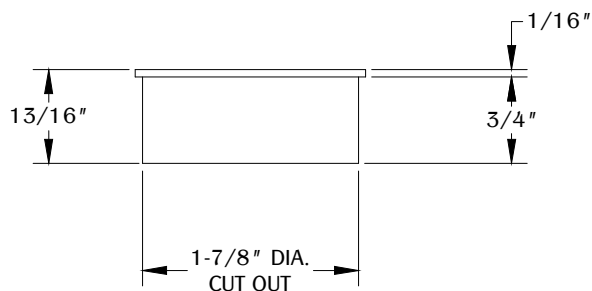


FRONT VIEW

1

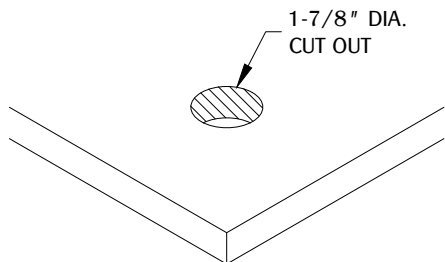

Make a cut out in the desired location on your work surface.  
Cut a hole at 1-7/8" diameter.

2

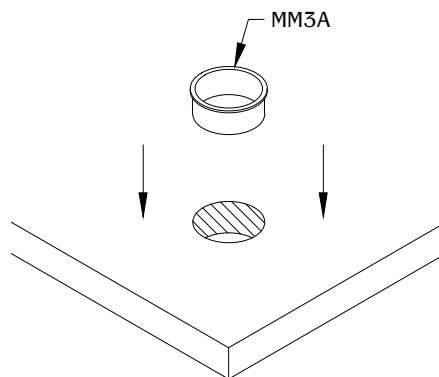

Install the MM3A into the cut out and make sure it is fully leveled onto the work surface.