


## HANGER BOLT

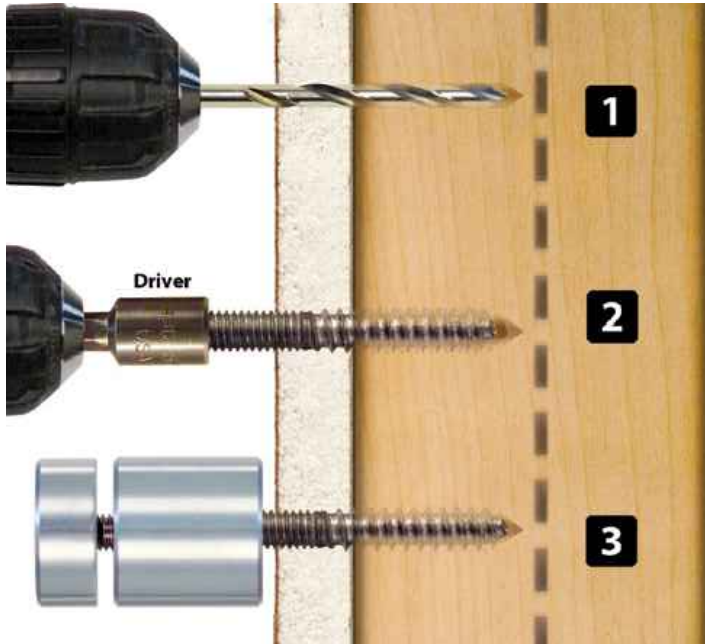

**Note:** Install hanger bolt in to wall studs.

Step 1: Drill a pilot hole in to desired work surface.

(**Note:** Recommend pilot hole sizes.

- MPB-HD-WHS1 = 1/8" DIA.
- MPB-HD-WHS2 = 3/16" DIA.
- MPB-HD-WHS3 = 1/4" DIA.
- MPB-HD-WHS4 = 1/4" DIA.
- MPB-HD-WHS5 = 1/4" DIA.)

Step 2: To install the hanger bolt, we recommend two options:

- Option A: We recommend using hex jam nuts to use as a tool to wrench and tighten in to the work surface.
- Option B: Purchase a stud driver (MPB-HD-WHSD2). (**Note:** MPB-HD-WHSD2 accommodates MPB-HD-WHS3, MPB-HD-WHS4, and MPB-HD-WHS5.)

**Tip:** Apply candle wax or bar of soap on to anchor to help with installing and/or removing it from the work surface.

**Note:** Be sure to leave the desired thread length exposed from the wall surface needed to attach parts. Once installed, remove the hex jam nuts or driver from anchor.

Step 3: Attach the MPB parts needed for your application.

