


Remove the 1/2" knockout opening located on the bottom of the base. Attach the conduit to the base of the unit. A fitting may be required (not included).

6

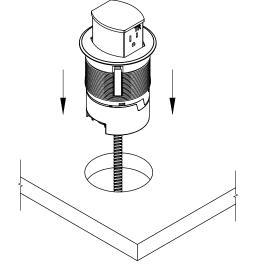

Reattach the base to the housing and secure with provided screws. Install the unit into the cut out and make sure it is fully level and flush with the work surface.

wire to the white screw, and the black or red wire to

the brass screw marked "HOT".

Screw locking ring onto the unit by turning clockwise from underneath the work surface. Locking ring should rotate smoothly once properly engaged. If not, the locking ring may be cross-threaded - undo and try again.