


NOTE:


- Do **NOT** remove tape!
- **MUST** be installed by a professional electrician.
- **MUST** comply with local electrical code.
- For use on a normally dry work surface.
- Table thickness is 3/4" MIN. to 1-11/16" MAX.
- 6 ft. Conduit Cord.

2

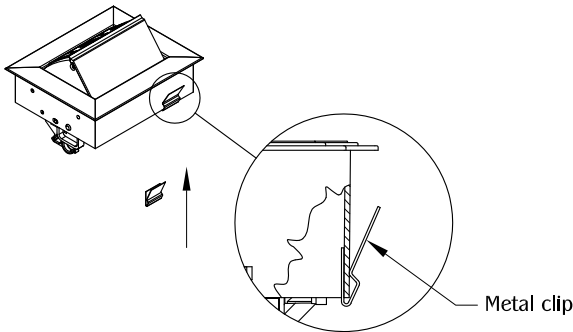


Place metal clips near the ends of the back of the unit. (NOTE: Metal clips are for use in hard surface material only as an optional mounting means.)

4

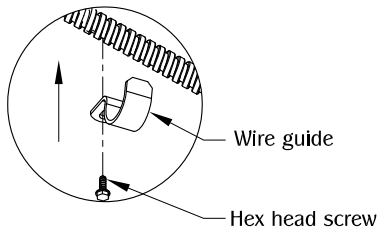


Optional wire guide.

5

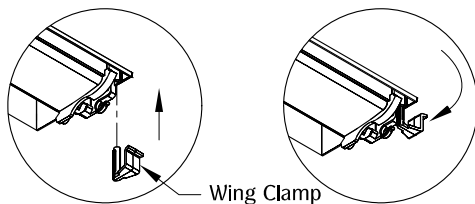


Secure unit by turning bottom wing clamp.

1

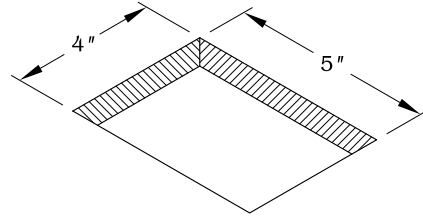

Determine the position and location of the unit on the work surface. Cut the hole at 5" X 4". Place and allow enough clearance for unit operation. DO NOT place unit where the cable is strained or trapped.

3

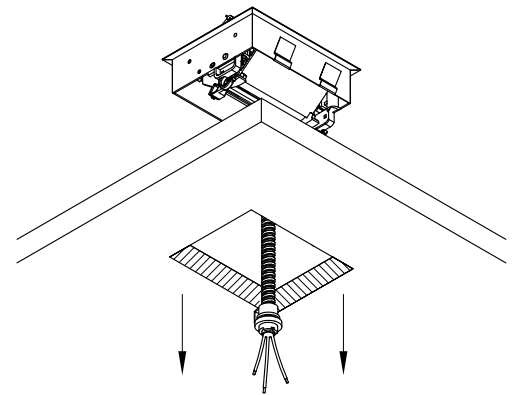

Guide the conduit cord through the cut out. Install the unit into the cut out and make sure it is fully leveled onto the surface.

TABLE OF CONTENTS:

	.....1X PCS36A/EE/HW
	.....1X Wire guide
	.....1X 5/8" Hex-head screw
	.....2X Metal clip
	.....2X Wing clamp