
MOCKETT


DOUG MOCKETT & COMPANY, INC.

PART #

PCS43C/DE

310.318.2491 • 800.523.1269 • www.mockett.com

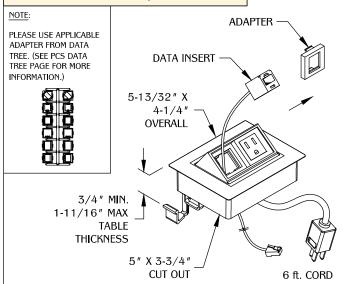


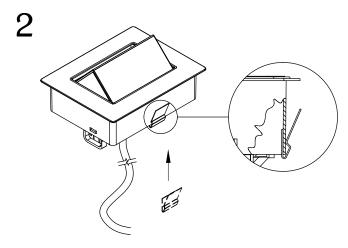

Place metal clips near the ends of the back of the unit. (NOTE: Metal clips are for use in hard surface material only as an optional mounting means.)















Secure unit by turning bottom wing clamp.

1

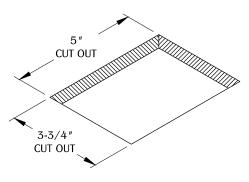

Make a cut out in the desired location on your work surface. Place near a power outlet and allow enough clearance for unit operation. DO NOT place unit where the cable is strained or trapped. Cut the hole at 5 " X 3-3/4".

3

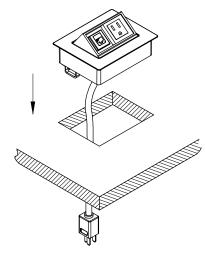

Guide the power cord through the cut out. Install the unit into the cut out and make sure it is fully leveled onto the surface.

TABLE OF CONTENTS:



.....1X PCS43C/DE



.....1X Wire manager



.....1X Metal clip




.....2X Wing clamp

PART #

PCS Data Tree


310.318.2491 • 800.523.1269 • www.mockett.com

1.) Select the appropriate adapter from the chart below. (example: Panduit Mini-Com Series jack would use "FFF" adapter marked on back of adapter.)





- 2.) Snap Jack into adapter following the instructions provided with the jack.
- 3.) Once assembled, snap adapter into the notched, square holes in the orientation shown.

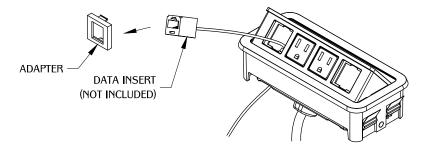

NOTE:

Please verify fit of jack in adapter before ordering large quantities as manufacturer designs may change without notice.