
MOCKETT


PART #

PCS50A


310.318.2491 • 800.523.1269 • www.mockett.com

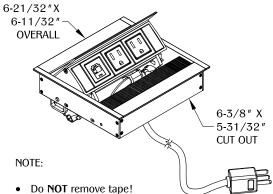


- 6 ft. cord length.
- For use on a normally dry work surface.
- Table thickness is 3/4" MIN. to 1-11/16" MAX.
- Plug dimension is 1-11/32" X 1-1/32" X 7/8".
- Please use applicable adapter from data tree.
 (See PCS data tree on page 2 for more information.)

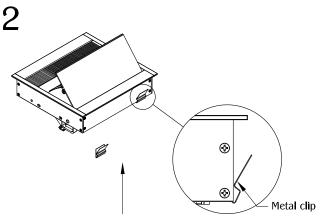


Place metal clips near the ends of the back of the unit. (NOTE: Metal clips are for use in hard surface material only as an optional mounting means.)

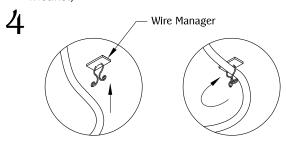


Optional wire manager.

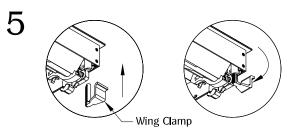


Secure unit by turning bottom wing clamp.

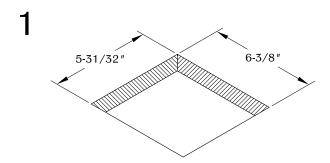

Determine the position and location of the unit on the work surface. Cut the hole at 6-3/8" X 5-31/32". Place and allow enough clearance for unit operation. DO NOT place unit where the cable is strained or trapped.

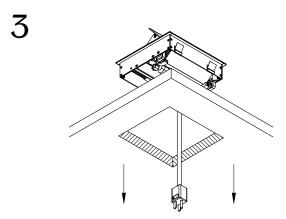

Guide the power cord through the cut out. Install the unit into the cut out and make sure it is fully leveled onto the surface.

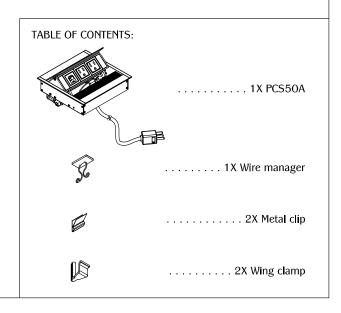


PART #

PCS Data Tree

310.318.2491 • 800.523.1269 • www.mockett.com


1.) Select the appropriate adapter from the chart below. (example: Panduit Mini-Com Series jack would use "FF" adapter marked on back of adapter.)

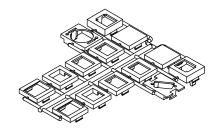

*Jacks, not included, UL Listed (DUXR) or Recognized (DUXR2) jacks required.

Adapter	Manufacturer	Website
AA	Systimax/CommScope	www.Commscope.com/Systimax
AA	Uniprise/CommScope	www.Commscope.com/Systimax
ВВ	L-Com Keystone Modular	www.L-Com.com
ВВ	NETCONNECT, and 110 Connect Series Modular Jack	www.Anixter.com
ВВ	Siemon ZMAX Style	www.Siemon.com
ВВ	Allen Tel Versa Tap Series	www.Graybar.com
ВВ	Leviton Quick Port ® Series	www.Leviton.com
ВВ	Belden REVconnect	www.Belden.com
CC	Hubble Nextspeed ™ Keystone Series	www.Hubbell-premise.com
DD	Blank (No coupler/jack)	-
EE	Ortronics TracJack Series	www.Ortronics.com
FF	Panduit Mini-Com Series	www.Panduit.com
GG	Microphone Jack/3-pin XLR, solder style only	www.Mockett.com
НН	Video Monitor Jack/DB-15, panel mount solder style	www.Mockett.com

- 2.) Snap Jack into adapter following the instructions provided with the jack.
- 3.) Once assembled, snap adapter into the notched, square holes in the orientation shown.

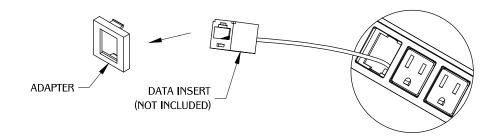

NOTE:

Please verify fit of jack in adapter before ordering large quantities as manufacturer designs may change without notice.