


Key slot Align the (2) mounting bracket to the desired key slots to the T-studs on both sides under the unit.

T-stud

TABLE OF CONTENTS:



.....1X PCS90/4E/U1

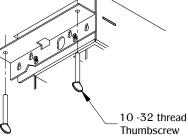

Install and tighten the (2) 10- 32 thread thumbscrews on the mounting bracket on both sides until unit is secure. Plug the unit into nearby outlet and unit is ready for use.



......2X Mounting Bracket

......4X 2″ 10-32 thread Thumbscrew

2021.09.08