



1 OPTION

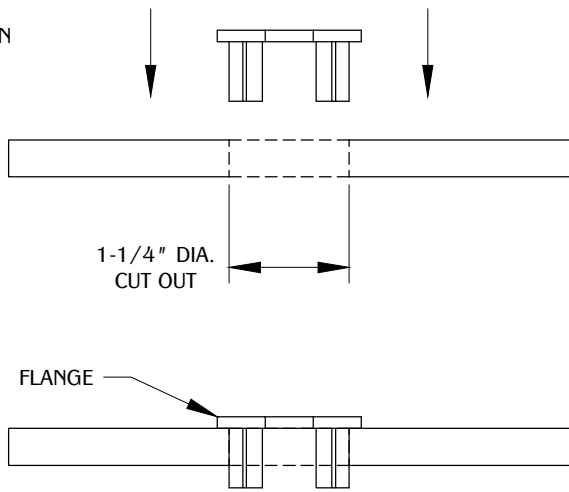

1 Cut a 1-1/4" hole with flange raised slightly above desktop.

2 OPTION

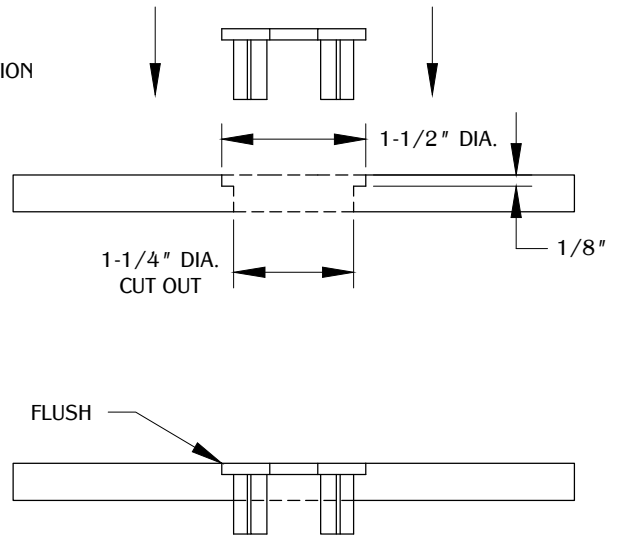

1 Countersink a hole 1-1/2" in diameter by 1/8" deep.
2 Drill hole 1-1/4"

TABLE OF CONTENTS:



..... 1x PG2