



Determine the position and location of the part in the work surface. Mark the mounting positions and drill the pilot holes for the mounting hardware. (Note: Mounting hardware not included.)

2

NOTE:
RECOMMENDED MOUNTING
HARDWARE: SCREW MUST
HAVE A 3/8" DIAMETER
HEAD AND WASHER SHOULD
BE 3/4" IN DIAMETER
(NOT INCLUDED)

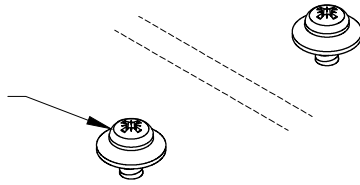


3

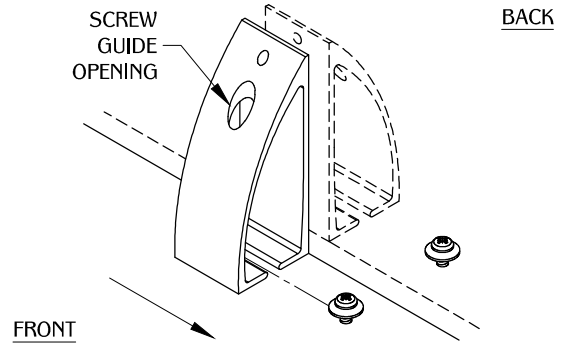

Insert the screws into the pilot holes enough to slide the part into place.





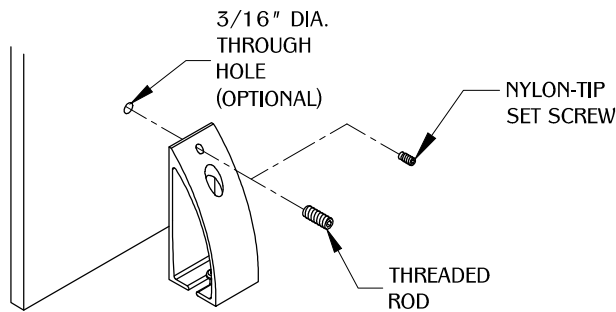

Position the part over the screwdriver opening. Place the panel material. Tighten the mounting screws to secure the part on both sides.

4



Secure the panel by installing the nylon-tip set screw or the threaded rod depending on the thickness of your panel. Note: Max panel height = 18".

TABLE OF CONTENTS:

2 X PGRP4A
2 X NYLON-TIP 6-32 SET SCREW
1 X 1/2" 6-32 SET SCREW
1 X 3/4" 6-32 SET SCREW
1 X 7/8" 6-32 SET SCREW
1 X Hex Key