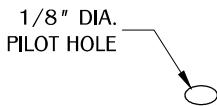
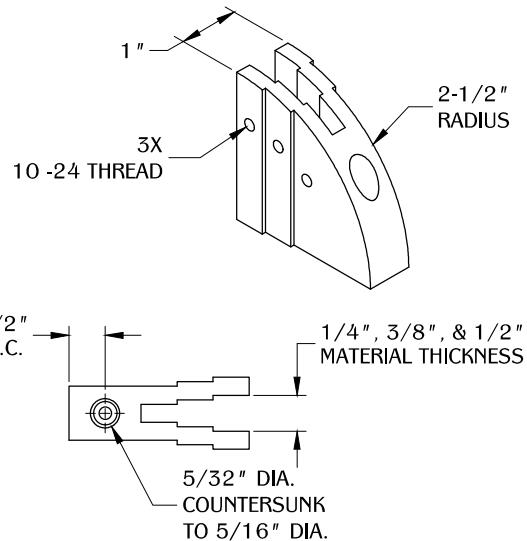


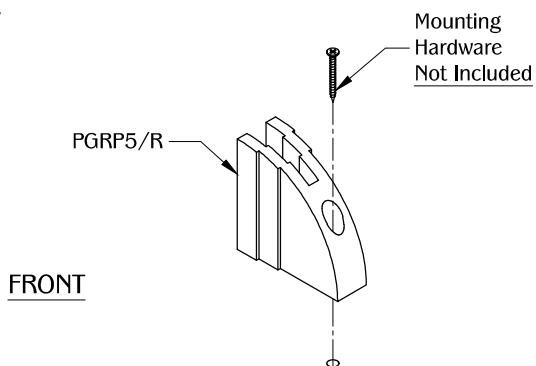
PART #

PGRP5

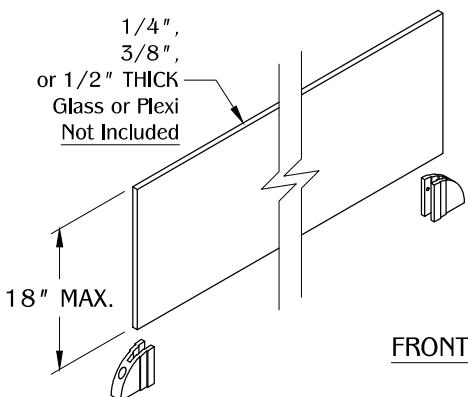
310.318.2491 • 800.523.1269 • www.mockett.com



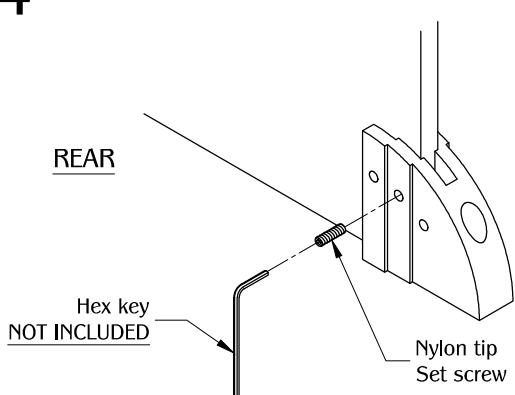
Determine the position and location of the part in the work surface. Drill a pilot hole.

2


Align the PGRP5/R to the pre-drilled pilot hole. Make sure the part is fully level on the work surface. Secure the part by using a mounting hardware. (NOTE: Repeat Step #1 for the PGRP5/L and make sure both are aligned.)

3


Insert your material (glass/display panel/etc) into the PGRP5 opening.

4


Use the hex key to secure the material with the set screw. (Note: Check tightness of screws periodically over time to ensure parts are securely tightened.)

TABLE OF CONTENTS:



.....1X PGRP5/L



.....1X PGRP5/R


2X 1 1/4"
10 -24 Thread
Nylon-tip set screw