


WM39

310.318.2491 • 800.523.1269 • www.mockett.com

1

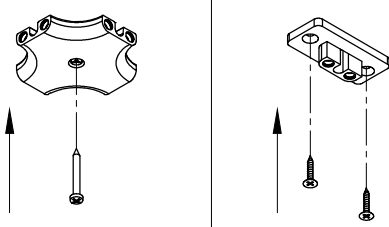


WM39/Quad
1-1/4" MIN.
Table thickness

WM39/Hook
3/4" MIN.
Table thickness


Determine mouting location and secure Quad Connector/Hook Connector to underside of your desktop. Quad Connector for horizontal mount using (1) button head wood screw or Hook Connector for vertical mount using(2) wood screws.

2

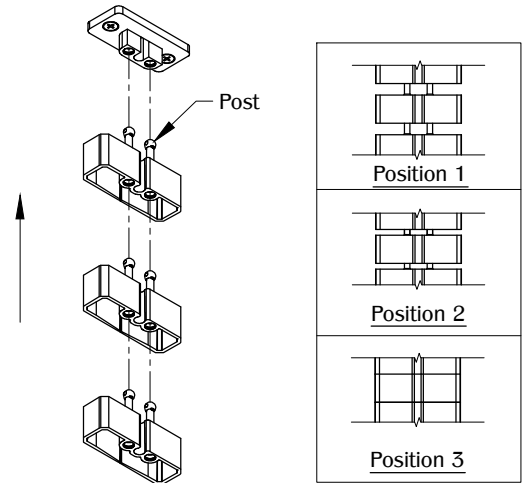


Determine overall length for travel distance of WM39 and snap pieces together to length. Male posts insert into female opening on underside. Choose one of three settings when snapping together.

3

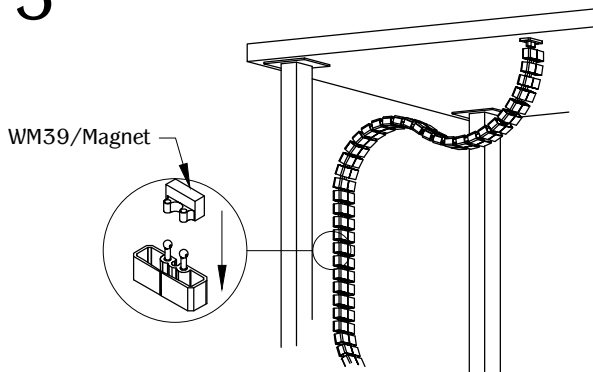


Install WM39/Magnet to the WM39/Link posts. Make sure the work surface is a magnetic metal.

4

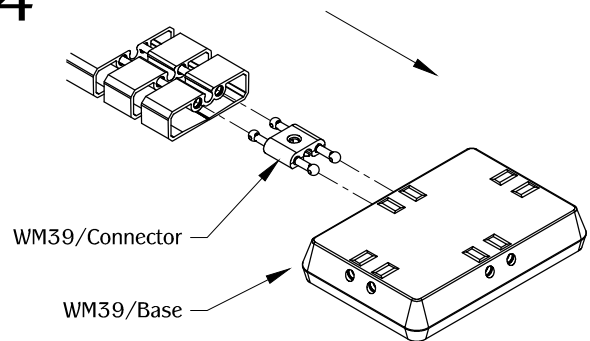





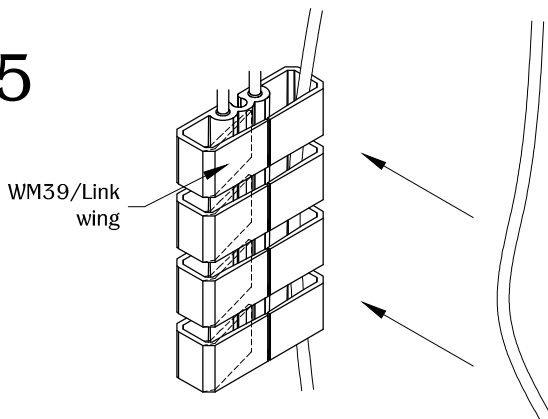



Connect WM39/Connector to WM39/Base and WM39/Link. Repeat for additional sides as needed from WM39/Base.

5



Push in the wing of WM39/LINK and slide cable in.

TABLE OF CONTENTS:

1 X WM39/Connector
2 X WM39/Magnet
50 X WM39/Link
1 X WM39 Hook
1 X WM39/QUAD
1 X WM39/Base
2 X 5/8" No.8 Wood screw
1 X 1" No.9 Button-head wood screw