
DOUG MOCKETT & COMPANY, INC.

PART #

PCS100C-U

310.318.2491 • 800.523.1269 • www.mockett.com

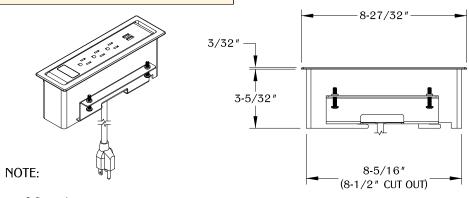


1-15/16" (2-1/8" CUT OUT)

- 6 ft. cord.
- USB ports are for charging use ONLY.
- Table thickness is 3/4" MIN. to 1-1/8" MAX.


FRONT VIEW

SIDE VIEW


2-5/8"

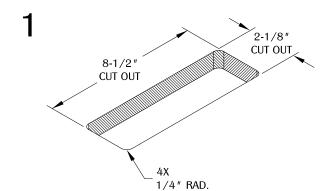


Make a cut out in the desired location on your work surface. Allow enough clearance for unit operation. DO NOT place unit where cable is strained or trapped. (Note: Cut out corners must contain 1/4" radius.)

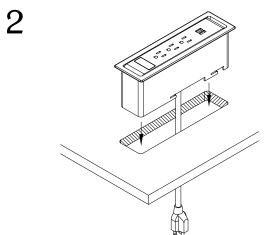

Guide the cord through the cut out. Install the unit into the cut out and make sure it is fully level on the work surface.

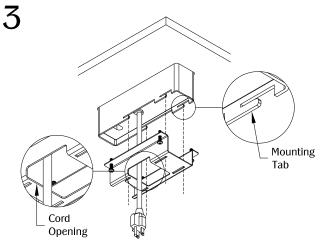

Loosen the clamp screws. Align the cord opening of the clamp to the bottom mounting tabs. (Note: Mounting tabs must point up when installing vertically.)

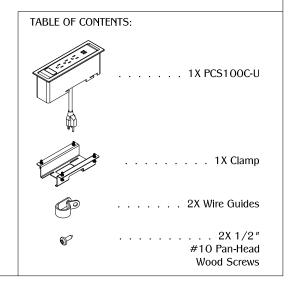


2021.07.26

PART #

PCS100C-U


310.318.2491 • 800.523.1269 • www.mockett.com



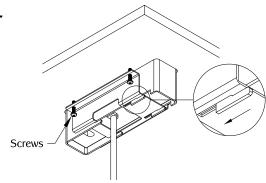

Lock the clamp by sliding to the edge of the mounting tab. Secure the unit by tightening the (4) screws. Plug the unit into nearby outlet and unit is ready for use.

5 (OPTIONAL)

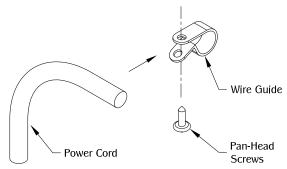

Place the cord in the wire manager. Align the screw with the mounting holes to lock the cord in place under the work surface. Repeat step for second wire guide.


(SEE REVERSE SIDE FOR DATA JACK INSTALLATION INSTRUCTIONS)

2021.07.26 2


PART #

Data Installation

310.318.2491 • 800.523.1269 • www.mockett.com

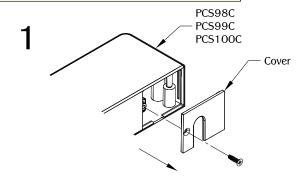


Remove the cover using a philips screwdriver.

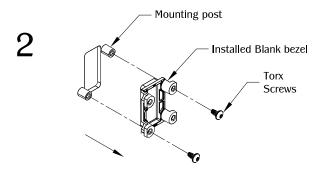


Use torx screwdriver to remove the blank bezel in the unit.

3

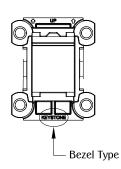

AVAILABLE BEZEL TYPE:


- Keystone
- Panduit
- Siemon
- Belden EZ
- CommScope
- Ortronics
- VGA (Front & Rear)
 - Cable retainer
- Blank

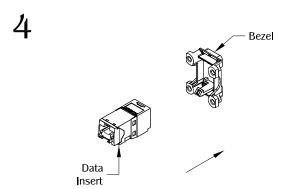


REAR VIEW

Select the corresponding data type labeled on the bottom rear of the data bezel.

Wire the data insert and snap it to the bezel.

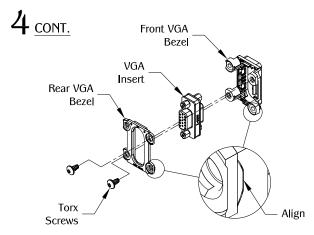

For VGA data, use the front and back VGA bezel. Make sure the front and back bezel align as shown above.

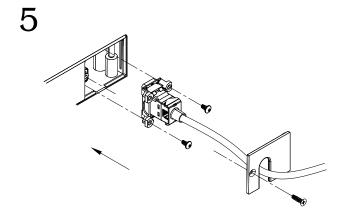

Install the data insert assembly upright in the unit and use (2) torx screws. Guide the wire from the cover opening. Secure the cover with the screw.

TABLE OF CONTENTS:



. 8 X Data Bezel

*****C

. 4 X Torx Screws

2021.07.26 3